



Voice Mail Box Number (typically your 10-digit Direct Inward Dial number): \_\_\_\_\_ - \_\_\_\_\_ - \_\_\_\_\_  
 Telephone Portal: 651-789-7688      Default PIN: 7677      New PIN: \_\_\_\_\_  
 Web Portal: <https://portal.popp.com/>      Password: \_\_\_\_\_

**Accessing Your Voice Mail Box**

**From Your Own Telephone:**

- Press the  button or dial [\*] [1] [5]
- Enter [PIN] followed by [#]

**From a Telephone With Voice Mail Within the Telephone System:**

- Press the  button or dial 651-789-7688
- Press [\*] to log in as another subscriber
- Enter your [10-digit voice mail box number] followed by [#]
- Enter [PIN] followed by [#]

**From a Telephone Without Voice Mail or Outside the Telephone System:**

Option 1:

- Dial 651-789-7688
- Enter your 10-digit telephone number [nnn-xxx-xxxx] followed by [#]
- Enter [PIN] followed by [#]

Option 2:

- Dial your 10-digit telephone number [nnn-xxx-xxxx]
- Press [\*] during voice mail greeting
- Enter [PIN] followed by [#]

**Manage Your Voice Mail Box and Messages**

**Record or Change Your Voice Mail Greeting:**

- Press [3] to work with your greetings
  - Press [1] to set up a personal greeting
    - Press [1] to work with your personal greeting
      - Press [1] to re-record your personal greeting (only applies if personal greeting has been recorded)
  - Record your greeting and press [#] when finished  
**Example:** *You have reached Bob Jones. I am unable to take your call right now. Please leave a message and I'll return your call as soon as possible. Thank you.*
  - Press [1] to save your greeting

**Record or Change Your Name:**

- Press [3] to access the greetings menu
  - Press [3] to change the recording of your name
    - Press [2] to record your name
      - Press [1] to record your name
  - Record your name and press [#] when finished
  - Press [1] to save your recorded name

**Change Your PIN:**

- Press [4] to change your mailbox settings
- Press [3] for security options
- Press [1] to change your PIN
- Enter a new [PIN] (4-20 digits in length) followed by [#]  
**Note: PIN may not contain a sequence (i.e., 1234) or a single digit repeated more than two times in a row (i.e., 1111), or any part of the Voice Mail Box number**
- Enter your new [PIN] again to confirm followed by [#]
- Press [\*] to exit

**Listen to New Messages:**

- The system tells you how many new and saved voice mails you have
  - Press [1] to get your messages
    - Press [1] to get your voice mails
- While listening to voice mail message
  - Press [7] to decrease playback speed
  - Press [7], [7] to rewind three seconds
  - Press [9] to increase playback speed
  - Press [9], [9] to fast forward three seconds
- After listening to voice mail message
  - Press [1] to repeat (replay)
  - Press [2] to save
  - Press [3] to delete
  - Press [4] to reply
  - Press [5] to send a copy (forward)
  - Press [#] to leave as new

**Subscriber Menu Options**

**Main Menu Options:**  
 Press [1] to get messages

Press [2] to send a message to another voice mail box

- Enter phone number and press [#], press [#]. Record message.  
 Press [#], press [#] to send message.

Press [3] to work with your greetings

- Press [1] to set up personal greeting
- Press [2] to work with your extended absence greeting
- Press [3] to select a system generated greeting or change the recording of your name
- Press [5] to work with the greeting callers hear when your phone line is busy
- Press [6] to work with your out of hours greeting
- Press [9] to work with the greeting callers hear when your telephone is set to forward all calls to voicemail
- Press [\*] to exit

Press [4] to change voice mail settings

- Press [1] to work with your group lists
- Press [2] for hands free and timesaver options
- Press [3] for security options
- Press [4] for group mailbox options
- Press [5] for notification options – message waiting indicator
- Press [6] for additional settings
- Press [7] for advanced call feature settings
- Press [\*] to exit

Press [5] to work with reminder settings

- Press [1] to disable reminders
- Press [2] to add a new reminder
- Press [\*] to exit

Press [6] to get deleted messages

- Press [1] to get your deleted voicemails
- Press [1] to repeat message or [2] to restore your deleted message
- Press [3] to permanently delete the message
- Press [4] to reply
- Press [5] to send a copy
- Press [#] to get your next message

Press [7] to leave mailbox and log on as another subscriber

**For Additional Training and Support**

- Visit [www.popp.com](http://www.popp.com) or call POPP Communications at 763-797-7900