



www.popp.com

POLY VVX 311/411

VOLUME, AUDIO, AND RINGTONE SETTINGS - INTRODUCTION

THIS VIDEO FEATURES A VVX 411. BUTTON LOCATIONS MAY VARY SLIGHTLY ON DIFFERENT PHONE MODELS.

1



 
www.popp.com

VVX 311/411


VOLUME, AUDIO, AND RINGTONE SETTINGS
- INTRODUCTION



2

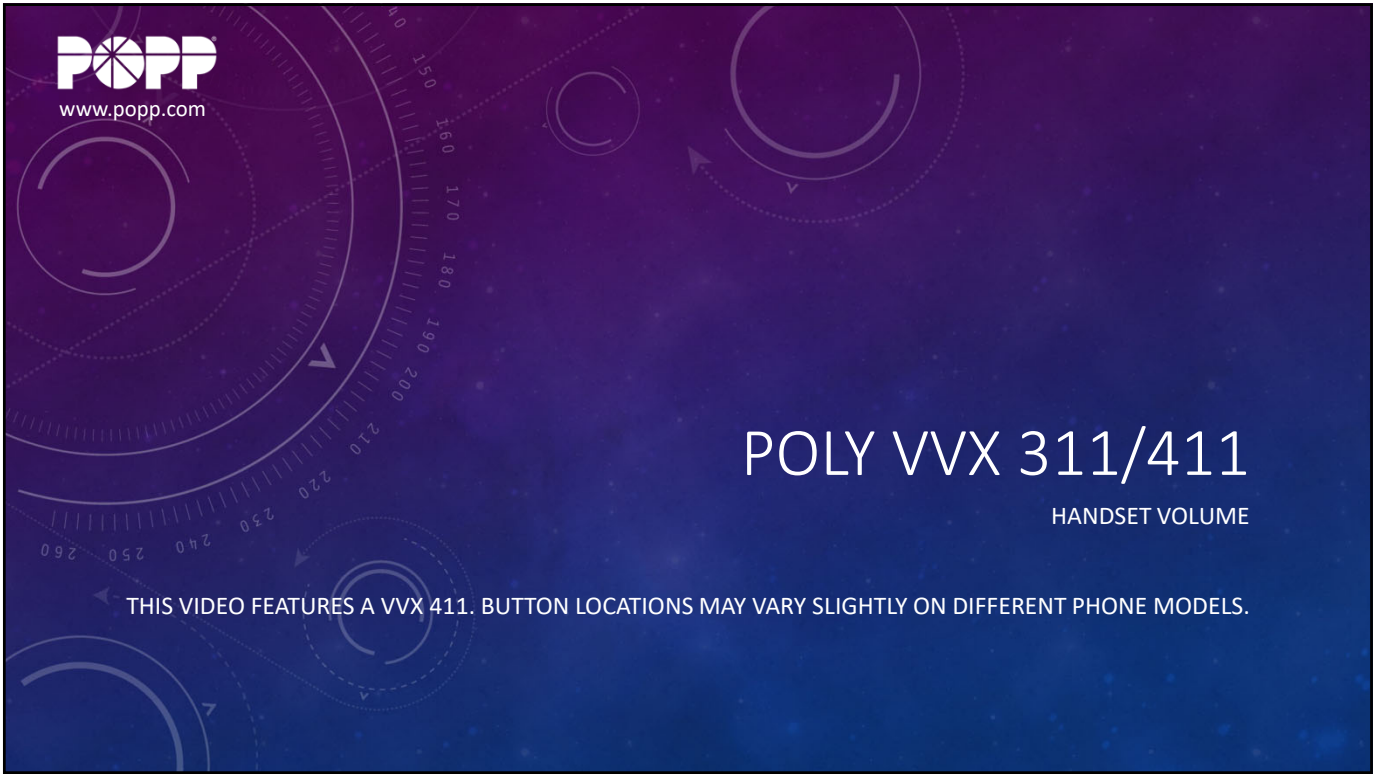

3

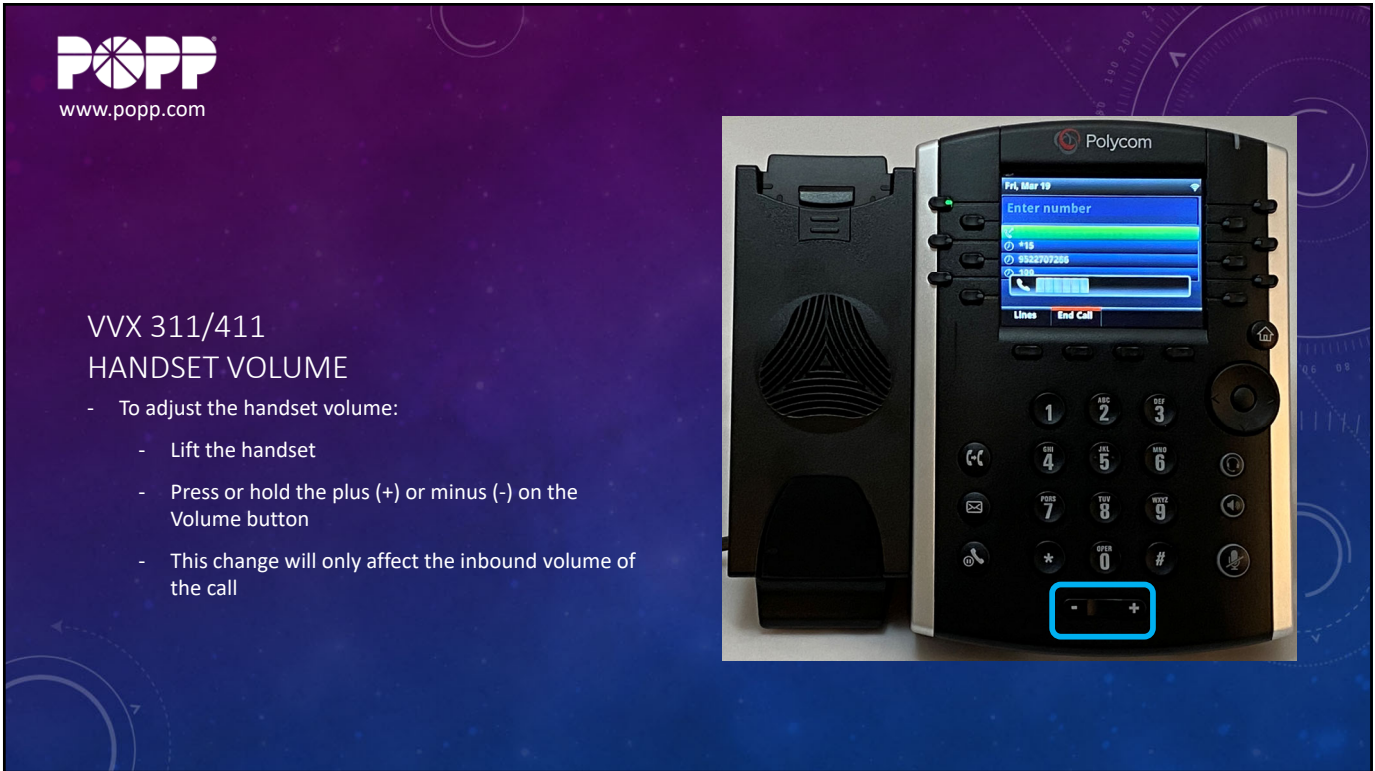 

4



www.popp.com

VVX 311/411 HANDSET VOLUME

For more training videos, visit
www.popp.com/support



5

POLY VVX 311/411

SPEAKER VOLUME

THIS VIDEO FEATURES A VVX 411. BUTTON LOCATIONS MAY VARY SLIGHTLY ON DIFFERENT PHONE MODELS.

6

VVX 311/411
SPEAKER VOLUME

- To adjust the speaker volume:
 - Press the Speaker button



7

VVX 311/411
SPEAKER VOLUME

- To adjust the speaker volume:
 - Press the Speaker button
 - Press or hold the plus (+) or minus (-) on the volume button
- This adjustment can also be made during a phone call while using the speakerphone



8

VVX 311/411
SPEAKER VOLUME

For more training videos, visit
www.popp.com/support



9



POLY VVX 311/411
HEADSET VOLUME

THIS VIDEO FEATURES A VVX 411. BUTTON LOCATIONS MAY VARY SLIGHTLY ON DIFFERENT PHONE MODELS.

10



VVX 311/411
HEADSET VOLUME

- To adjust the headset volume:
 - Press the Headset button



11



VVX 311/411
HEADSET VOLUME

- To adjust the headset volume:
 - Press the Headset button
 - Press or hold the plus (+) or minus (-) on the volume button
- This adjustment can also be made during a phone call while using a headset



12



www.popp.com

VVX 311/411 HEADSET VOLUME

For more training videos, visit
www.popp.com/support



13



www.popp.com

POLY VVX 311/411

MUTE OUTBOUND AUDIO

THIS VIDEO FEATURES A VVX 411. BUTTON LOCATIONS MAY VARY SLIGHTLY ON DIFFERENT PHONE MODELS.

14



VVX 311/411
MUTE OUTBOUND AUDIO

- To mute outbound audio:
 - Press the Mute button



15



VVX 311/411
MUTE OUTBOUND AUDIO

- To unmute:
 - Press the Mute button again



16



www.popp.com

VVX 311/411

MUTE OUTBOUND AUDIO

For more training videos, visit
www.popp.com/support



17



www.popp.com

POLY VVX 311/411

RING VOLUME

THIS VIDEO FEATURES A VVX 411. BUTTON LOCATIONS MAY VARY SLIGHTLY ON DIFFERENT PHONE MODELS.

18



VVX 311/411
RING VOLUME

- To adjust the ring volume (with the phone idle):
 - Press or hold the plus (+) or minus (-) on the Volume button
 - The sample ring tone will indicate the new ring volume



19

 


VVX 311/411
RING VOLUME

For more training videos, visit
www.popp.com/support



20

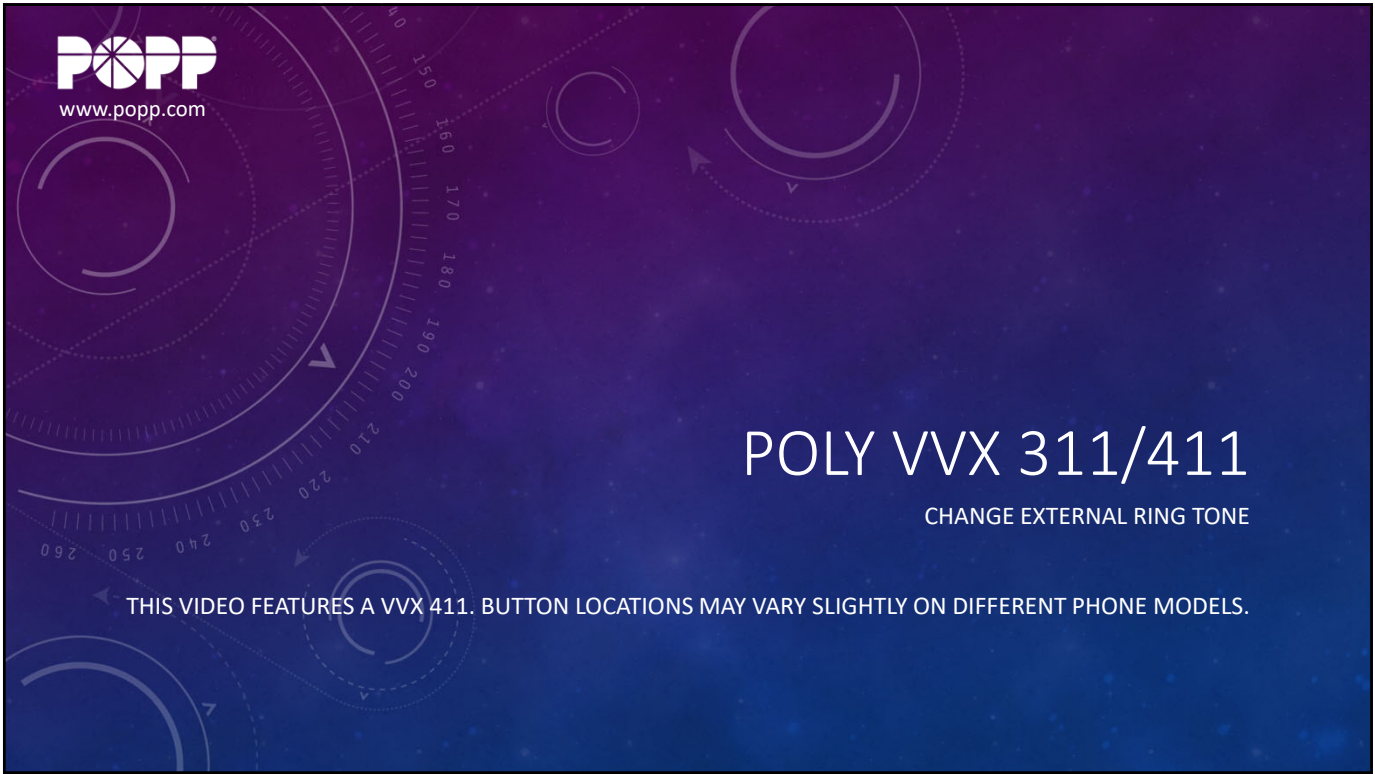

21



 
22



www.popp.com

VVX 311/411 CHANGE EXTERNAL RINGTONE

- Use the navigation keypad to select:
 - Settings
 - Basic
 - Ring Type
 - Default

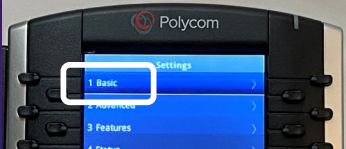


23



www.popp.com

VVX 311/411 CHANGE EXTERNAL RINGTONE

 - The Play softkey can be used to sample each ring tone

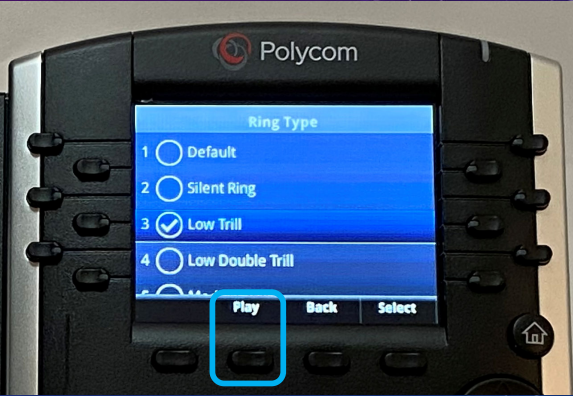

24



VVX 311/411
CHANGE EXTERNAL RINGTONE

- Use the Select softkey to select the desired ringtone



25



VVX 311/411
CHANGE EXTERNAL RINGTONE

- Lift the handset and hang up to exit the menu



26



VVX 311/411
CHANGE EXTERNAL RINGTONE

For more training videos, visit
www.popp.com/support

