




1



2



3

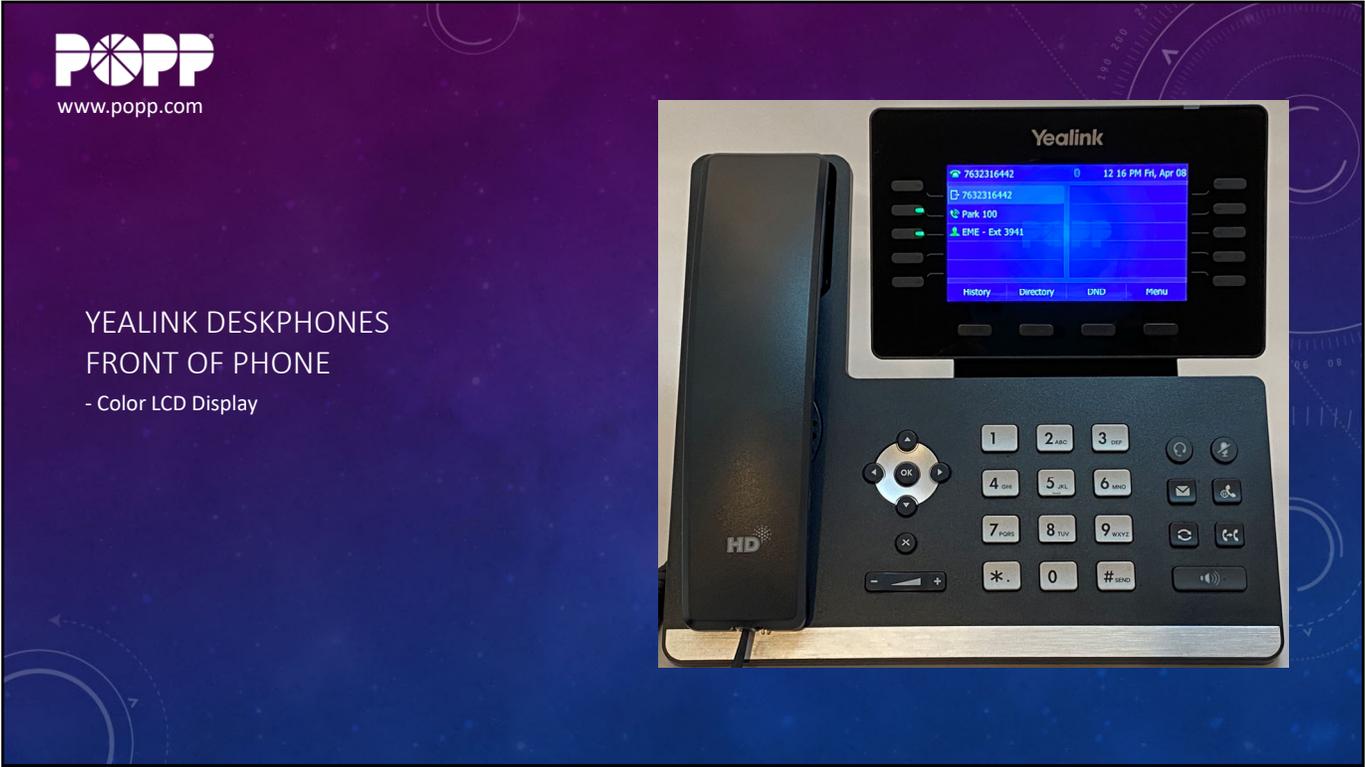

4



YEALINK DESKPHONES
FRONT OF PHONE

- Voicemail indicator light



5



YEALINK DESKPHONES
FRONT OF PHONE

- Programmable keys
- Option to toggle between pages when multiple pages of keys are configured (models T54/T46/T33 only)



6



YEALINK DESKPHONES
FRONT OF PHONE

- Softkeys



7



YEALINK DESKPHONES
FRONT OF PHONE

- Navigation buttons



8



YEALINK DESKPHONES
FRONT OF PHONE

- Headset
- Mute
- Message
- Hold
- Redial
- Transfer




9



YEALINK DESKPHONES
FRONT OF PHONE

- Speaker

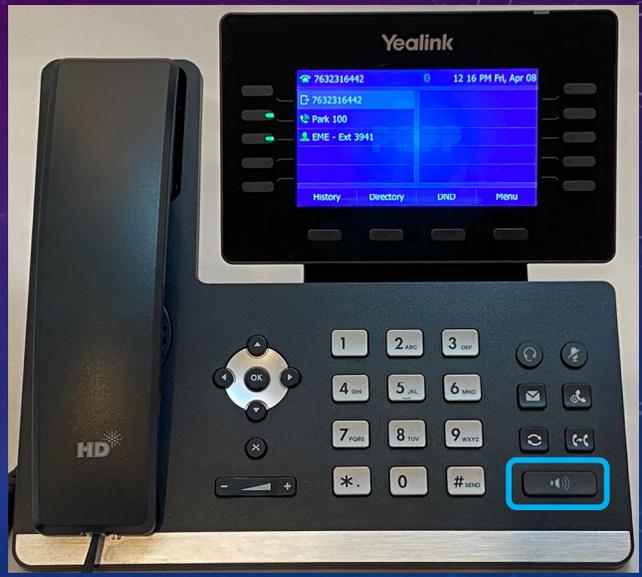

10



YEALINK DESKPHONES
FRONT OF PHONE

- Volume



11



YEALINK DESKPHONES
FRONT OF PHONE

- Standard 12-button keypad



12

POPP
www.popp.com

**YEALINK DESKPHONES
FRONT OF PHONE**
- Direct Inward Dial (DID) Number

The image shows a Yealink deskphone with a color LCD screen. The screen displays a call log with the following entries: a call from 7632316442 at 12:16 PM on Friday, April 08; a call to Park 100; and a call to EME - Ext 3941. A red rectangular box highlights the number 7632316442 in the first entry. Below the screen is a standard 12-button numeric keypad with function keys for call, hold, transfer, and speed dial. A handset is on the left side of the device.

13

POPP
www.popp.com

**YEALINK DESKPHONES
FRONT OF PHONE**


For more training videos, visit
www.popp.com/support

This image is similar to the previous one, showing the same Yealink deskphone. The screen displays the same call log. In this version, the number 7632316442 in the first entry is highlighted with a blue background. The rest of the interface, including the keypad and handset, is identical to the previous slide.

14



15

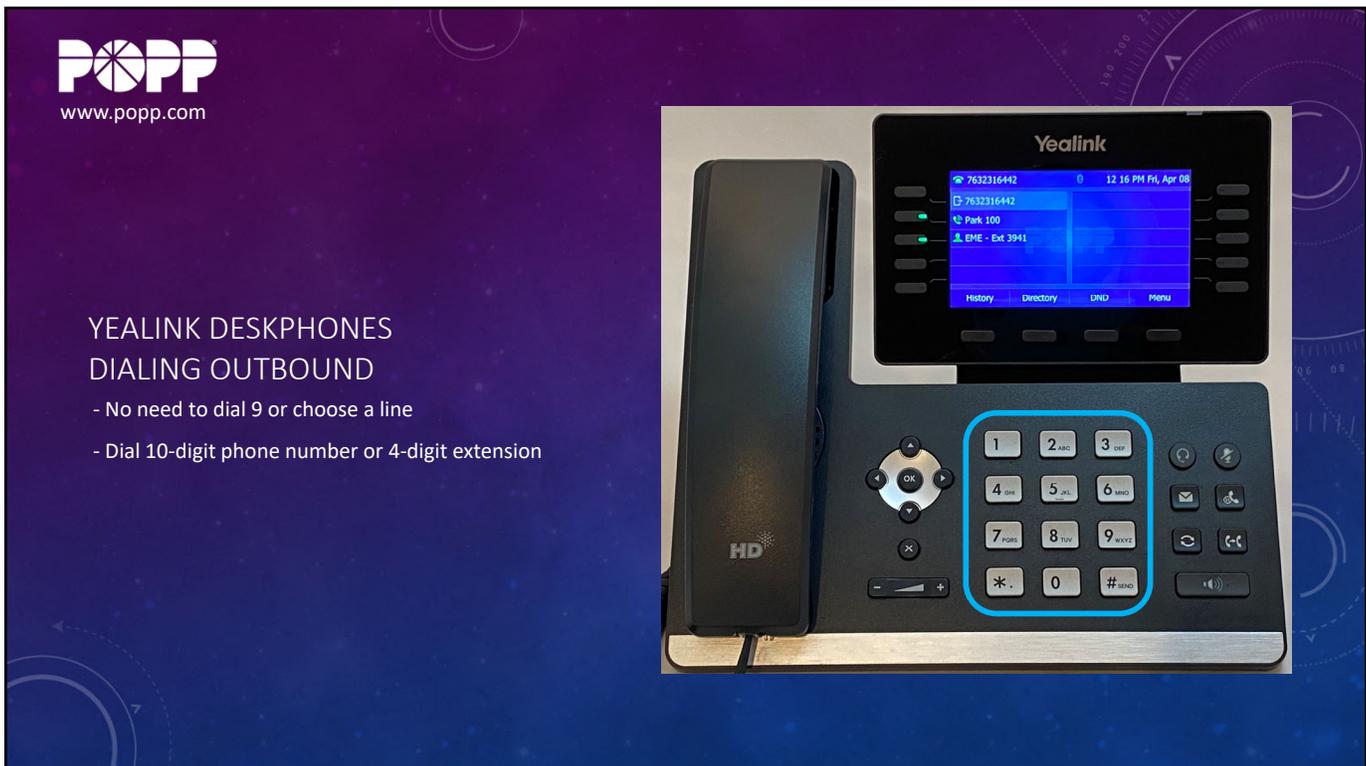

16

POPP
www.popp.com

YEALINK DESKPHONES DIALING OUTBOUND

- Use the [Delete] softkey to correct a misdial number



The image shows a Yealink deskphone screen with a blue background. At the top, it displays 'Yealink'. Below that, there's a status bar with '7632316442' and a lock icon. The main display area shows a green '763231...' icon, a 'Park 100' icon, and the number '6122365555'. At the bottom, there are four softkeys: 'Call' (green), '123', 'Delete' (blue), and 'Cancel' (blue). The 'Delete' softkey is highlighted with a red box.

17

POPP
www.popp.com

YEALINK DESKPHONES DIALING OUTBOUND

- Pick up the handset or press the [Call] softkey
- You may also use a headset



The image shows a Yealink deskphone screen with a blue background. At the top, it displays 'Yealink'. Below that, there's a status bar with '7632316442' and a lock icon. The main display area shows a green '763231...' icon, a 'Park 100' icon, and the number '6122365555'. At the bottom, there are four softkeys: 'Call' (green), '123', 'Delete' (blue), and 'Cancel' (blue). The 'Call' softkey is highlighted with a red box.

18



YEALINK DESKPHONES DIALING TOLL FREE OR LONG DISTANCE

- Entering a 1 is not required



19



YEALINK DESKPHONES DIALING TOLL FREE OR LONG DISTANCE

- Enter the 10-digit toll free or long distance number



20

POPP
www.popp.com

**YEALINK DESKPHONES
DIALING OUTBOUND**

For more training videos, visit
www.popp.com/support

21

POPP
www.popp.com

YEALINK DESKPHONES
RECEIVING AN INBOUND CALL


THIS VIDEO FEATURES A T54W. BUTTON LOCATIONS AND FEATURES MAY VARY ON DIFFERENT PHONE MODELS.

22



YEALINK DESKPHONES RECEIVING AN INBOUND CALL

- Answer, Forward, Silence, or Reject the call

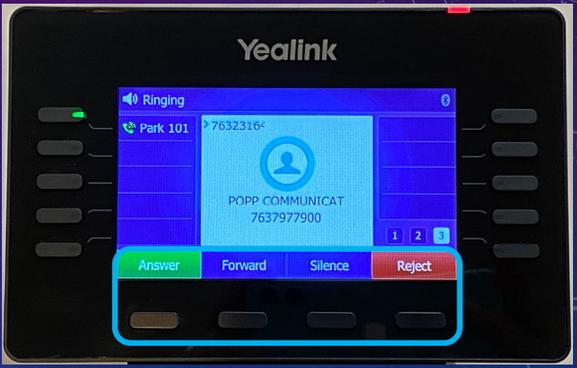

23



YEALINK DESKPHONES RECEIVING AN INBOUND CALL

- To answer the call:
 - Pick up the handset
 - Press the speakerphone button
 - Press the Answer softkey (defaults to speakerphone)



24

POPP
www.popp.com

YEALINK DESKPHONES RECEIVING AN INBOUND CALL

- To forward the call:
 - Press [Forward]
 - Dial the [10-digit number] or [4-digit extension] you want to forward the call to
 - Press [Call] to forward the call



25

POPP
www.popp.com

YEALINK DESKPHONES RECEIVING AN INBOUND CALL

- To silence the ringer, press [Silence]



26



www.popp.com

YEALINK DESKPHONES RECEIVING AN INBOUND CALL

- To send a call directly to voice mail, press [Reject]



27



www.popp.com

YEALINK DESKPHONES RECEIVING AN INBOUND CALL

For more training videos, visit www.popp.com/support



28



29




30



YEALINK DESKPHONES RECEIVING A SECOND INBOUND CALL

- To answer the call, press the Answer softkey

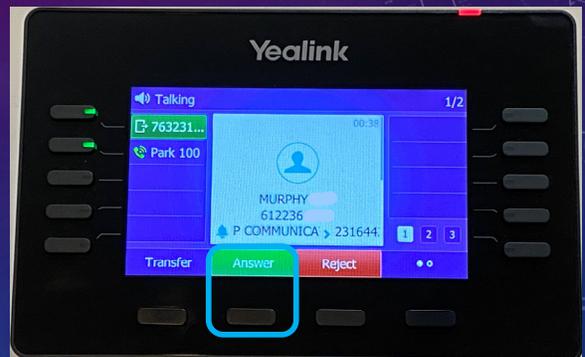

31



YEALINK DESKPHONES RECEIVING A SECOND INBOUND CALL

- Your first caller will automatically be placed on hold



32

POPP
www.popp.com



YEALINK DESKPHONES RECEIVING A SECOND INBOUND CALL

- To return to your first caller:
 - Use Navigation Keypad to select the held call



33

POPP
www.popp.com

YEALINK DESKPHONES RECEIVING A SECOND INBOUND CALL

- To return to your first caller:
 - Use Navigation Keypad to select the held call
 - Press the Resume softkey
- The second caller is placed on hold
- A headset can also be used



34

POPP
www.popp.com

YEALINK DESKPHONES
RECEIVING A SECOND INBOUND CALL

For more training videos, visit
www.popp.com/support



35