




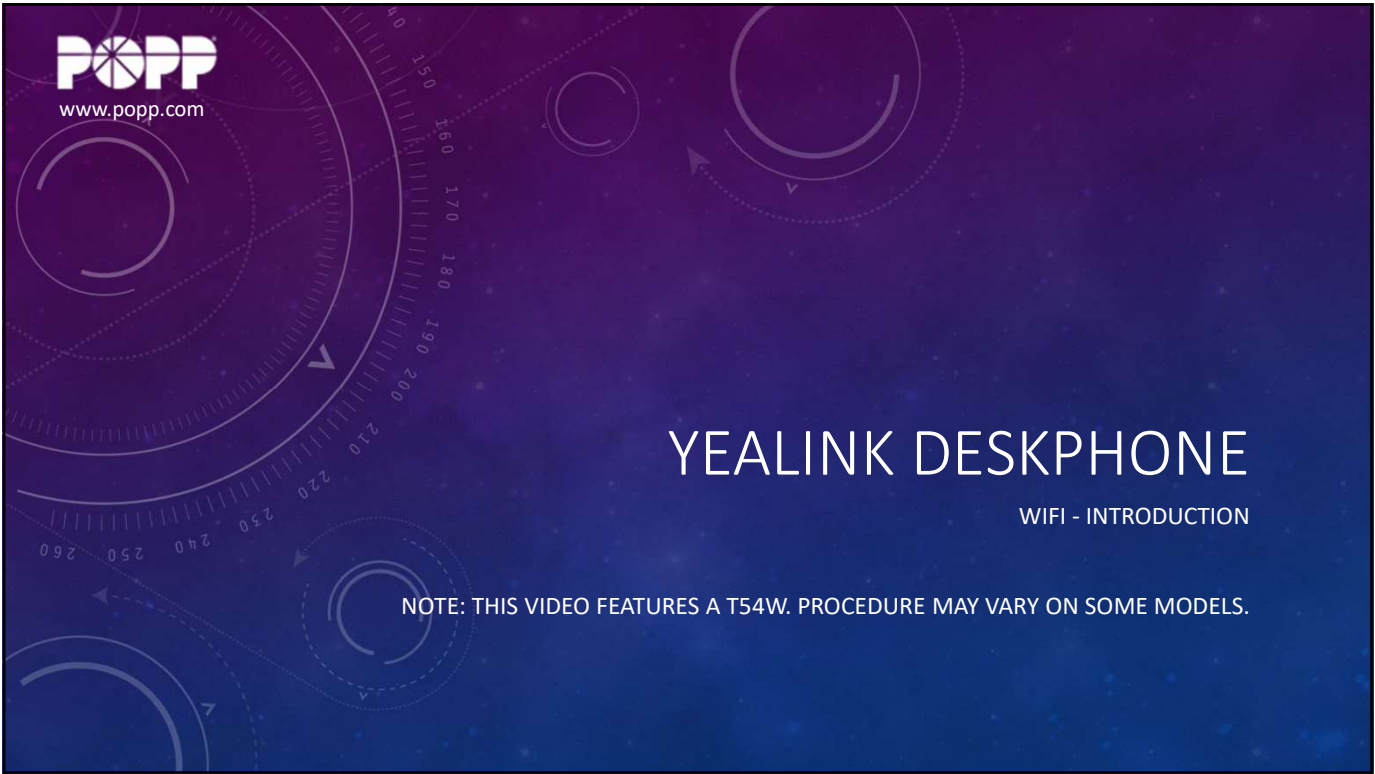


1

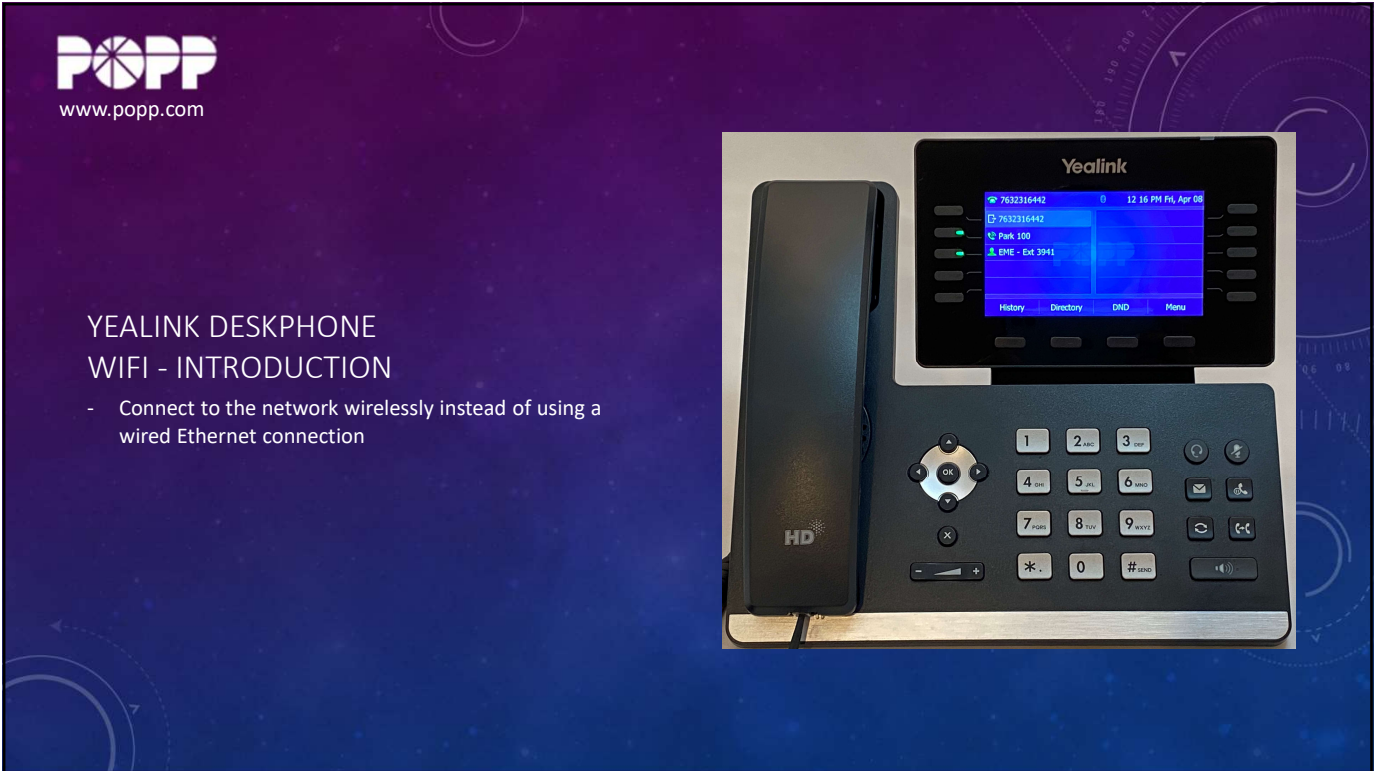

2

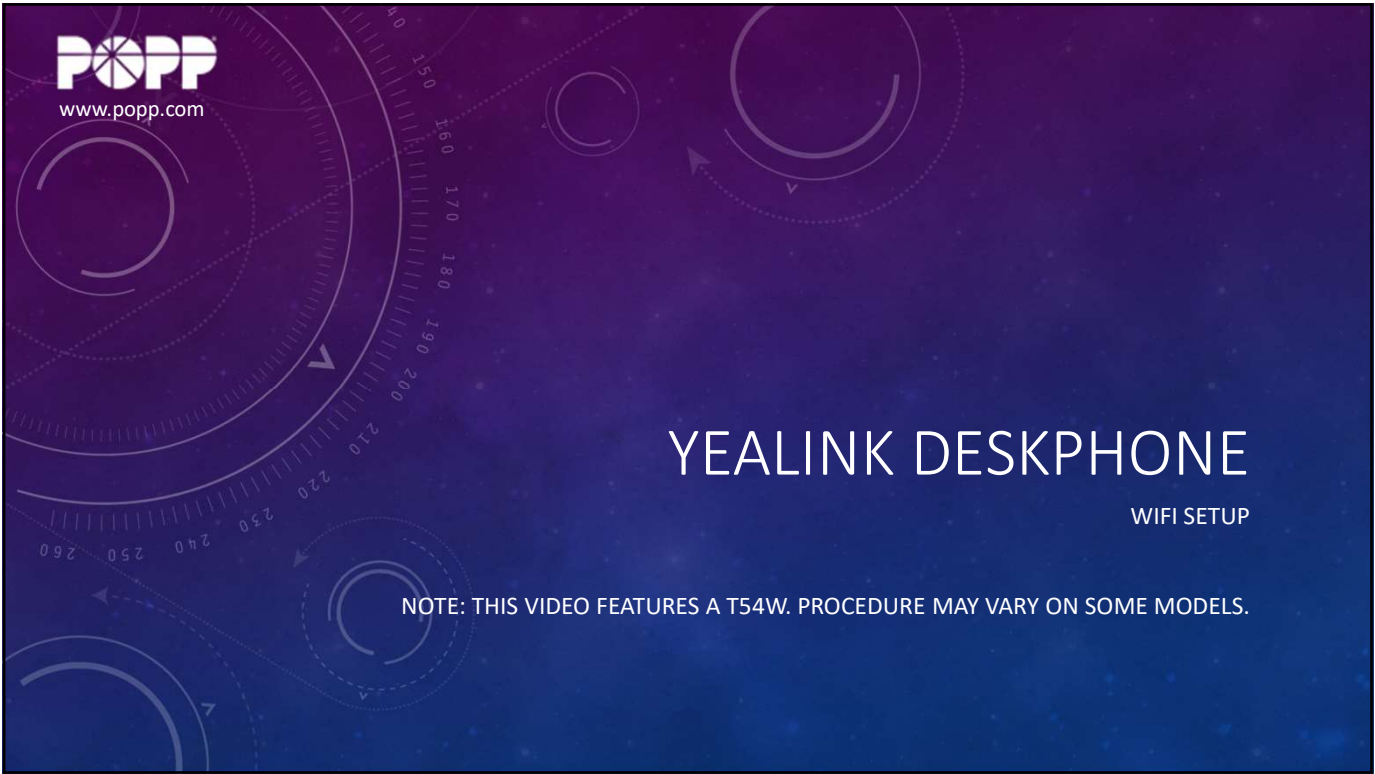

3

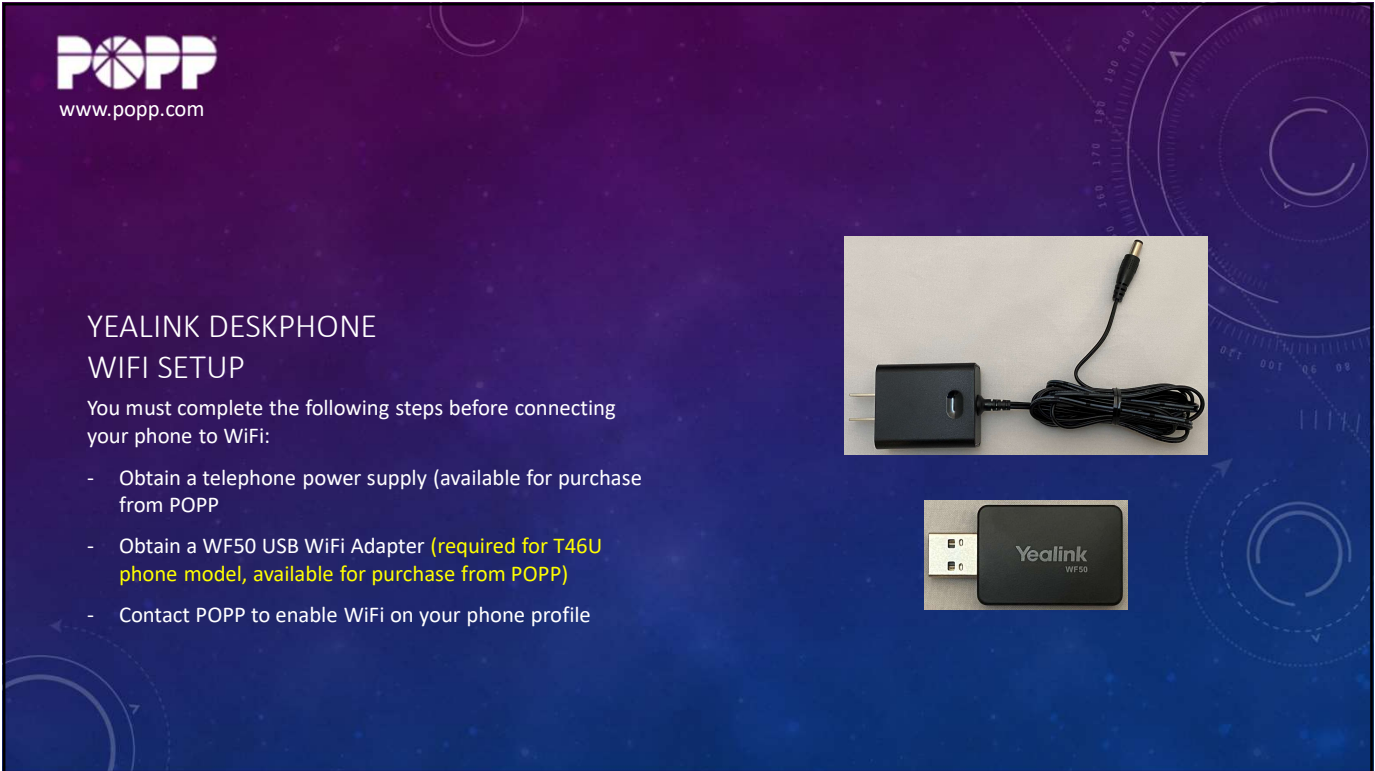

4



YEALINK DESKPHONE
WIFI SETUP

- If using a T46U phone model, plug the WiFi Adapter into a USB port on the back of the phone.
- Plug in the telephone power supply





5



YEALINK DESKPHONE
WIFI SETUP

On your deskphone:

- Press the [Menu] softkey
- Use the navigation keypad to select Basic
- Press the [OK] button

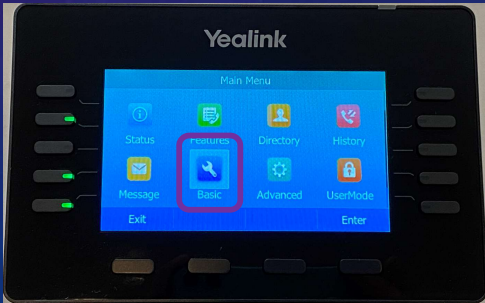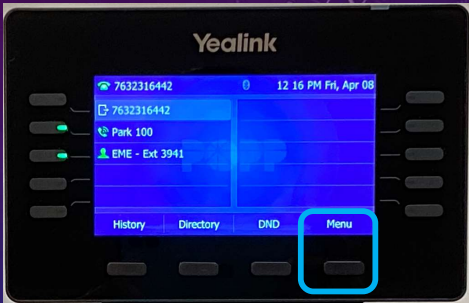

6




www.popp.com



YEALINK DESKPHONE WIFI SETUP

- Use the navigation keypad to scroll down and select WiFi
- Press the [OK] button

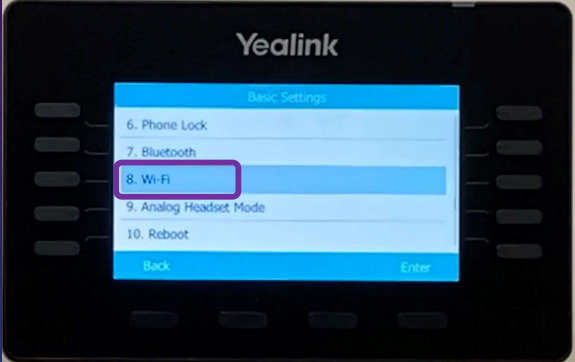



7



www.popp.com

YEALINK DESKPHONE WIFI SETUP

- Use the [Switch] softkey to turn the WiFi setting On
- Press the [Save] softkey

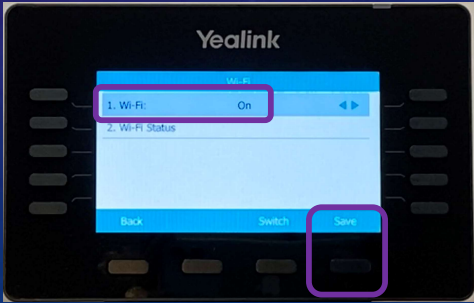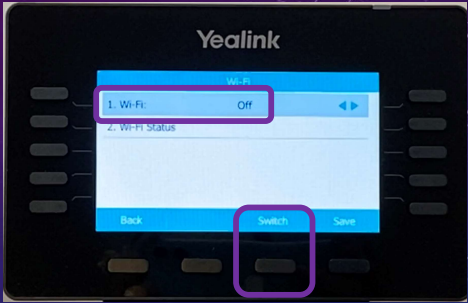

8




www.popp.com



YEALINK DESKPHONE WIFI SETUP

- Use the navigation keypad to select Easy Connection
- Press the [Connect] softkey

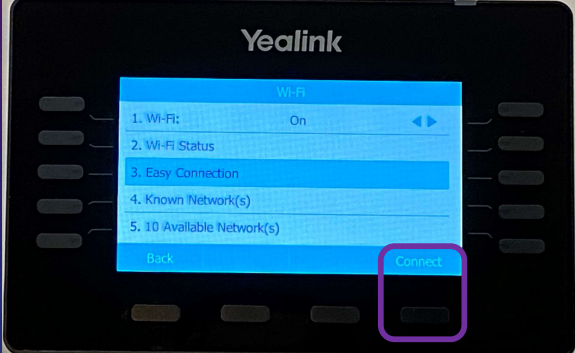

9





www.popp.com

YEALINK DESKPHONE WIFI SETUP

- Press the [WiFi List] softkey
- Use the navigation keypad to select the desired wireless network
- Press the [Connect] softkey



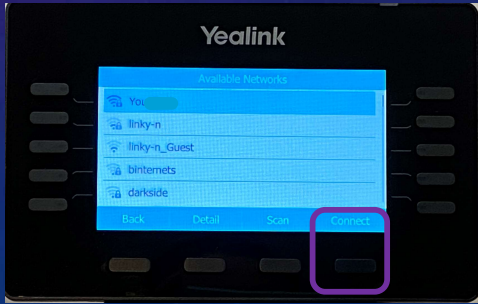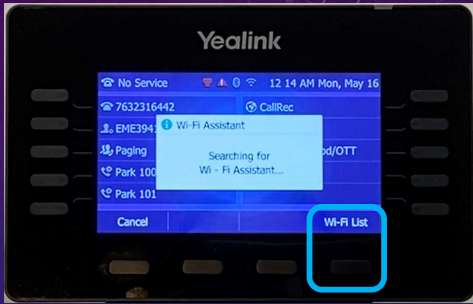


10



www.popp.com

YEALINK DESKPHONE WIFI SETUP

- Enter the [password] using the dialpad
- Use the [abc...123] softkey to toggle between numbers, letters, and symbols when entering the password
- Press the [Connect] softkey

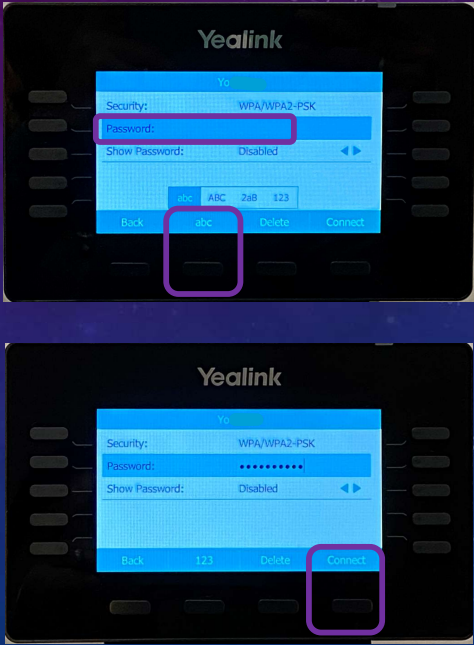


11



www.popp.com

YEALINK DESKPHONE WIFI SETUP

- Once connected, a check mark will display next to the network

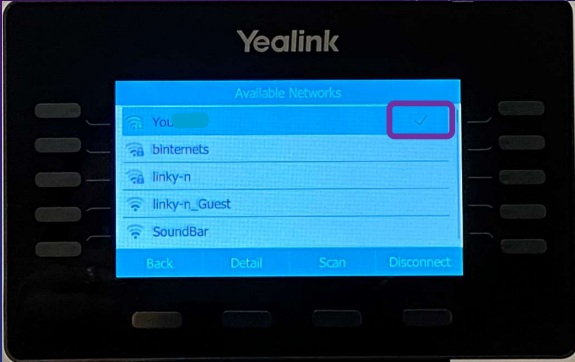

12



www.popp.com

YEALINK DESKPHONE WIFI SETTINGS

For more training videos, visit
www.popp.com/support



13



www.popp.com

YEALINK DESKPHONE

TROUBLESHOOTING WIFI

NOTE: THIS VIDEO FEATURES A T54W. PROCEDURE MAY VARY ON SOME MODELS.

14



www.popp.com

YEALINK DESKPHONE TROUBLESHOOTING WIFI

- WiFi is recommended only when running an Ethernet to the phone is not practical
- A strong, reliable WiFi signal is required



15



www.popp.com

YEALINK DESKPHONE TROUBLESHOOTING WIFI

Troubleshooting options if call quality is not good:

- Move the phone closer to a wireless access point
- Add another wireless access point closer to the phone to improve the signal



16



www.popp.com

YEALINK DESKPHONE TROUBLESHOOTING WIFI

For more training videos, visit
www.popp.com/support



17



www.popp.com

YEALINK DESKPHONE

DISABLING WIFI

NOTE: THIS VIDEO FEATURES A T54W. PROCEDURE MAY VARY ON SOME MODELS.

18




www.popp.com

YEALINK DESKPHONE DISABLING WIFI

On your deskphone:

- Press the [Menu] softkey
- Use the navigation keypad to select Basic
- Press the [OK] button



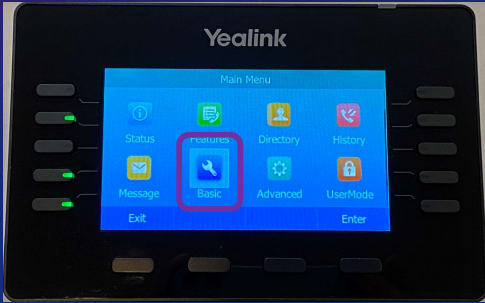

19




www.popp.com

YEALINK DESKPHONE DISABLING WIFI

- Use the navigation keypad to scroll down and select WiFi
- Press the [OK] button




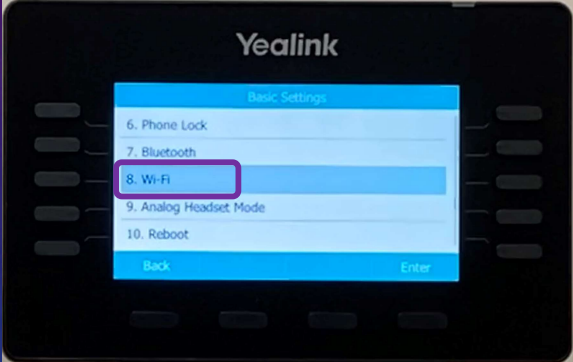


20



YEALINK DESKPHONE
DISABLING WIFI

- Use the [Switch] softkey to turn the WiFi setting Off
- Press the [Save] softkey

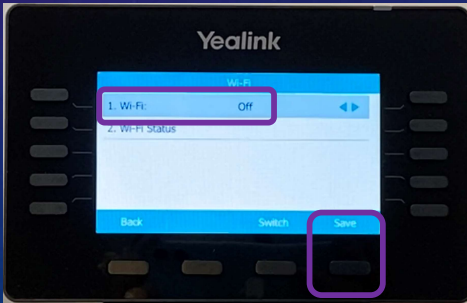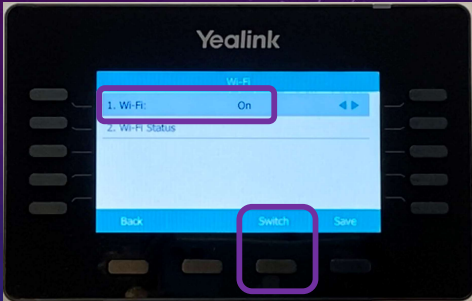


21



YEALINK DESKPHONE
DISABLING WIFI

- Unplug the WiFi adapter (T46U phone model only)
- Unplug the telephone power supply
- Plug in the Ethernet cable to the Internet port on the back of the phone to re-establish the wired network connection

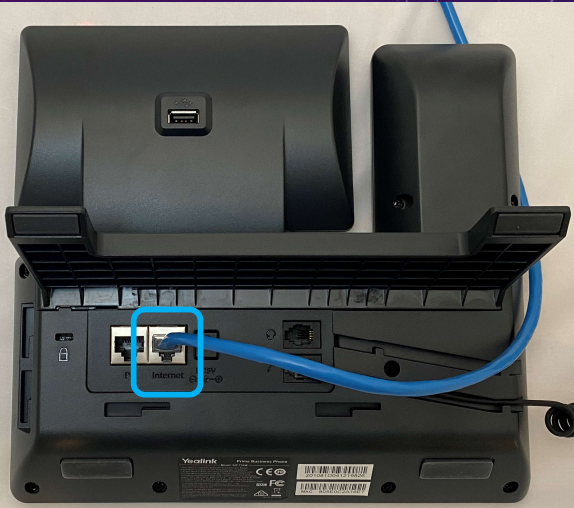

22


www.popp.com

YEALINK DESKPHONE
TROUBLESHOOTING WIFI

For more training videos, visit
www.popp.com/support

