

**Compatibility:**

The Yealink T46U deskphone supports WiFi, but requires a WF50 USB WiFi Adapter and a telephone power supply (available for purchase from POPP).

The Yealink T54W deskphone includes integrated WiFi capabilities without the need for a WiFi Adapter. A telephone power supply (available for purchase from POPP) is required.

**How it Works:**

Connecting to WiFi allows the Yealink T46U/T54W deskphones to connect to the network wirelessly instead of using a wired Ethernet connection.

**Getting Started:**

Before you can setup WiFi, POPP must enable WiFi on your phone profile. Contact POPP's Helpline at 763-797-7900 prior to completing the steps below.

**Yealink Deskphone WiFi Setup:**

- Plug in the telephone power supply
- If you're using a T46U phone, also plug in the USB WiFi Adapter into the back of the phone
- Press the [Menu] softkey
- Use the navigation keypad to select Basic > Wi-Fi > set Wi-Fi setting to On and press the [Save] softkey
- Use the navigation keypad to select Easy Connection, then press the [Connect] softkey
- Press the [Wi-Fi List] softkey
- Use the navigation keypad to select the desired wireless network, then press the [Connect] softkey
- Enter the password, making sure to use the [123...abc..] softkey to toggle between numbers, letters, and symbols when entering the password
- Press the [Connect] softkey
- Once connected, a check mark will display next to the network

**For Additional Training and Support**

- Visit [www.popp.com](http://www.popp.com) or call POPP Communications at 763-797-7900