



YEALINK DESKPHONE INTRODUCTION

- Physical features
- Phone call functionality



T31P



 
T33G



T46U



T54W

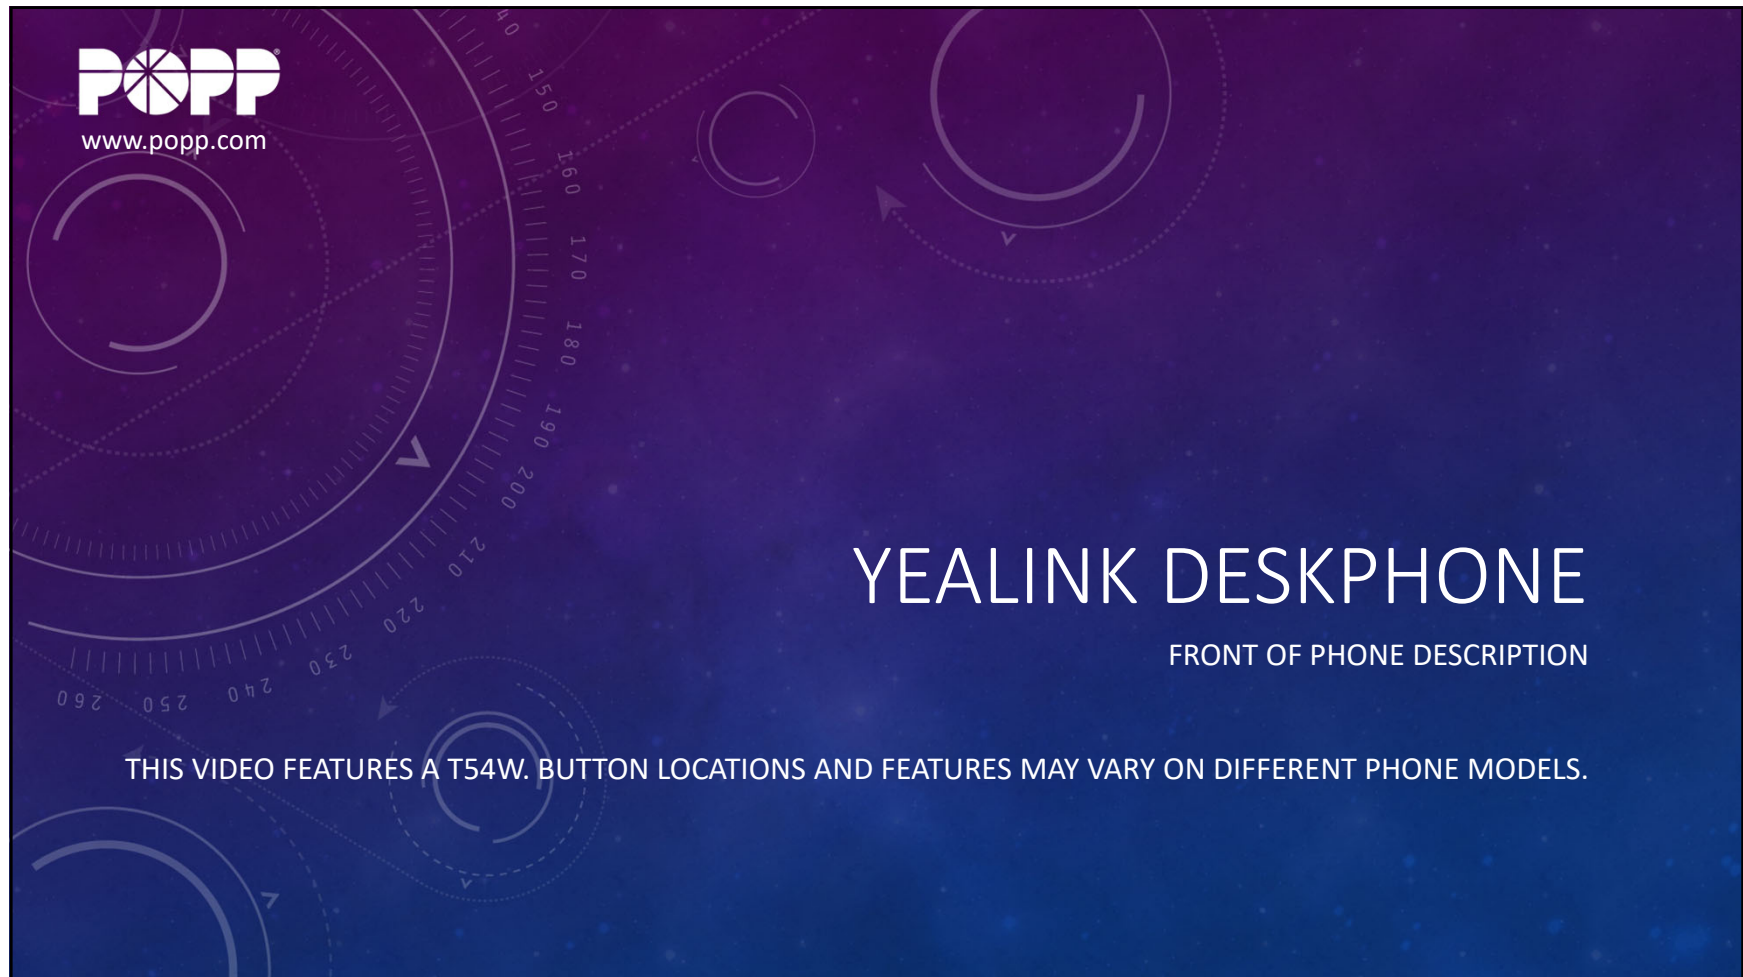



YEALINK DESKPHONE FRONT OF PHONE

 
- Color LCD Display





YEALINK DESKPHONE FRONT OF PHONE

- Voicemail indicator light

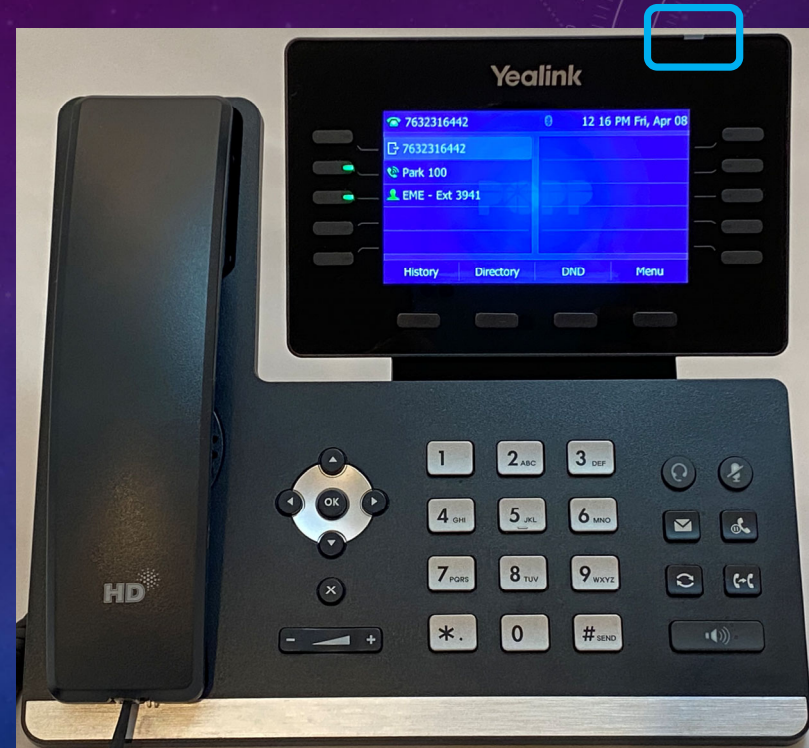



YEALINK DESKPHONE FRONT OF PHONE

- Programmable keys
- Option to toggle between pages when multiple pages of keys are configured (models T54/T46/T33 only)





YEALINK DESKPHONE FRONT OF PHONE

- Softkeys





YEALINK DESKPHONE FRONT OF PHONE

- Navigation buttons





YEALINK DESKPHONE FRONT OF PHONE

- Headset
- Mute
- Message
- Hold
- Redial
- Transfer





YEALINK DESKPHONE FRONT OF PHONE

- Speaker





YEALINK DESKPHONE FRONT OF PHONE - Volume





YEALINK DESKPHONE FRONT OF PHONE

- Standard 12-button keypad





YEALINK DESKPHONE FRONT OF PHONE

- Direct Inward Dial (DID) Number

 




YEALINK DESKPHONE FRONT OF PHONE

For more training videos, visit
www.popp.com/support



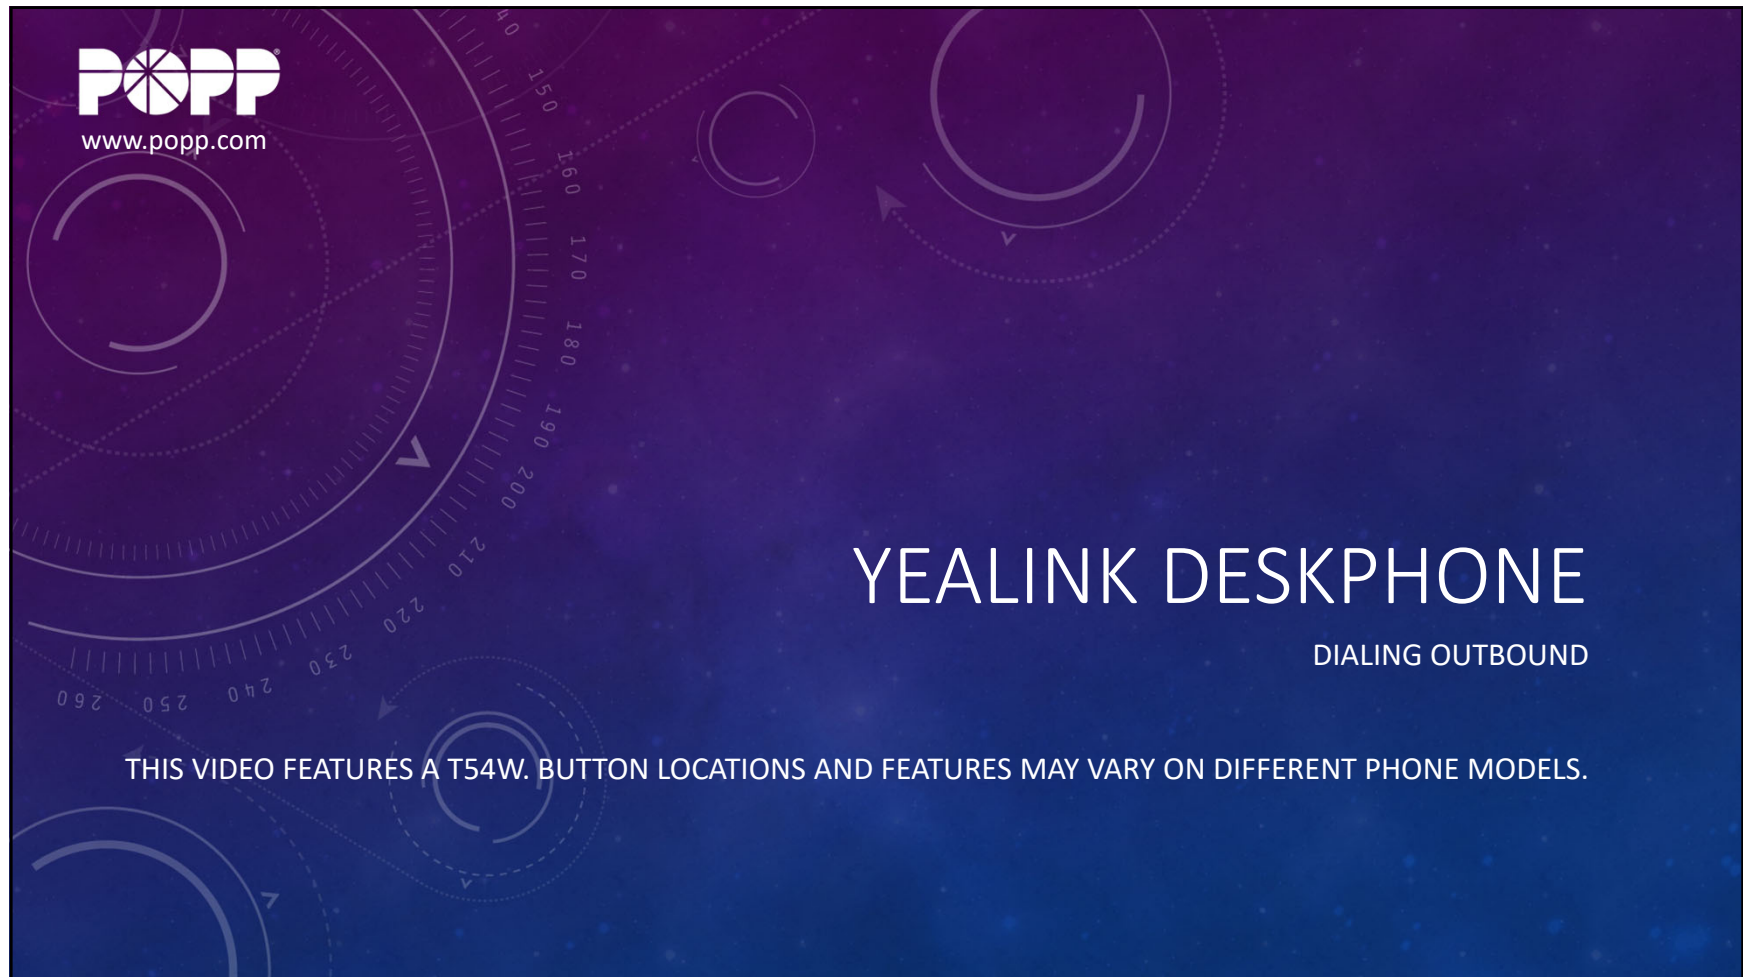



YEALINK DESKPHONE DIALING OUTBOUND

 
- No need to dial 9 or choose a line
- Dial 10-digit phone number or 4-digit extension





YEALINK DESKPHONE DIALING OUTBOUND


- Use the [Delete] softkey to correct a misdialed number

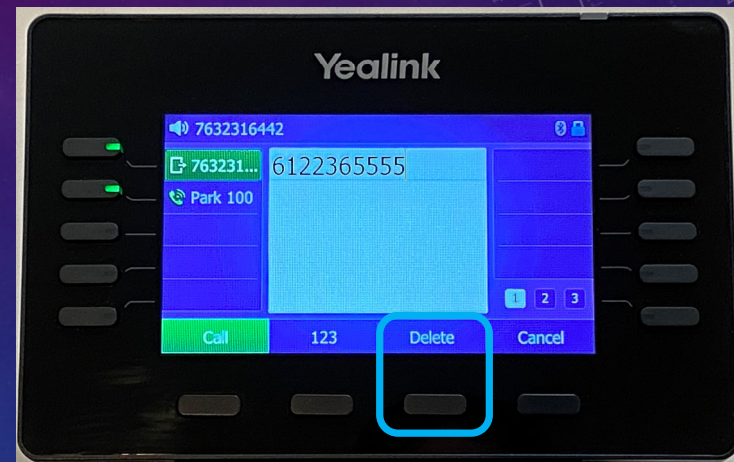



YEALINK DESKPHONE DIALING OUTBOUND

 - Pick up the handset or press the [Call] softkey
- You may also use a headset

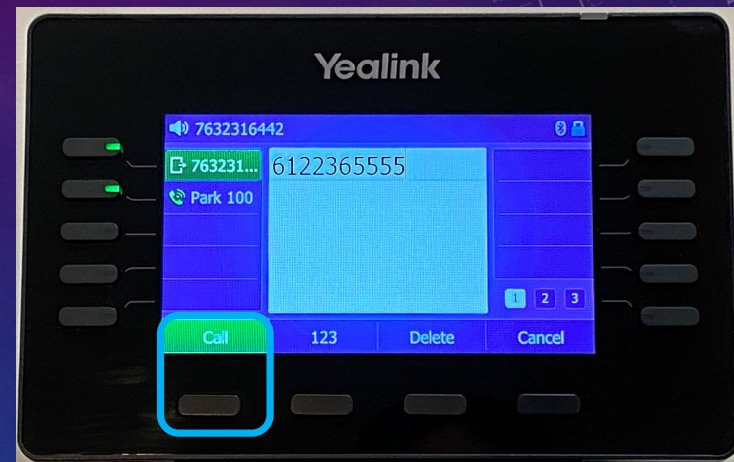



YEALINK DESKPHONE DIALING TOLL FREE OR LONG DISTANCE

- Entering a 1 is not required





YEALINK DESKPHONE DIALING TOLL FREE OR LONG DISTANCE

- Enter the 10-digit toll free or long distance number





YEALINK DESKPHONE DIALING OUTBOUND

For more training videos, visit
www.popp.com/support

 






YEALINK DESKPHONE RECEIVING AN INBOUND CALL

- Answer, Forward, Silence, or Reject the call

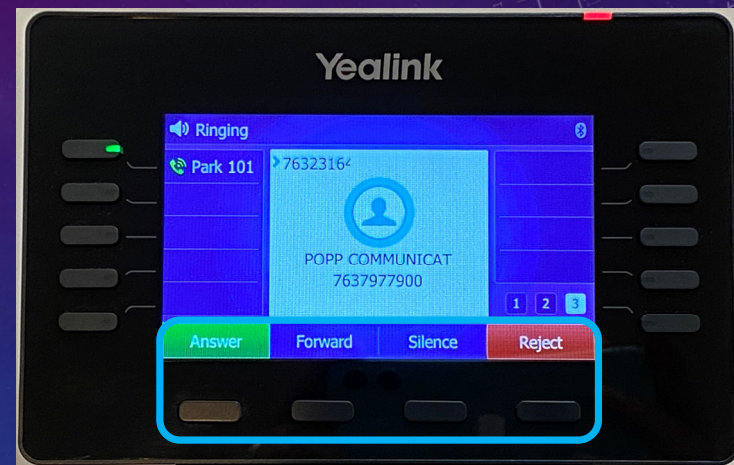



YEALINK DESKPHONE RECEIVING AN INBOUND CALL

- To answer the call:
 - Pick up the handset
 - Press the speakerphone button
 - Press the Answer softkey (defaults to speakerphone)





YEALINK DESKPHONE RECEIVING AN INBOUND CALL

- To forward the call:
 - Press [Forward]
 - Dial the [10-digit number] or [4-digit extension] you want to forward the call to
 - Press [Call] to forward the call





YEALINK DESKPHONE RECEIVING AN INBOUND CALL

- To silence the ringer, press [Silence]





YEALINK DESKPHONE RECEIVING AN INBOUND CALL

- To send a call directly to voicemail, press [Reject]





YEALINK DESKPHONE RECEIVING AN INBOUND CALL

For more training videos, visit
www.popp.com/support







YEALINK DESKPHONE RECEIVING A SECOND INBOUND CALL

 
- Transfer, Answer or Reject the call





YEALINK DESKPHONE RECEIVING A SECOND INBOUND CALL


- To answer the call, press the Answer softkey

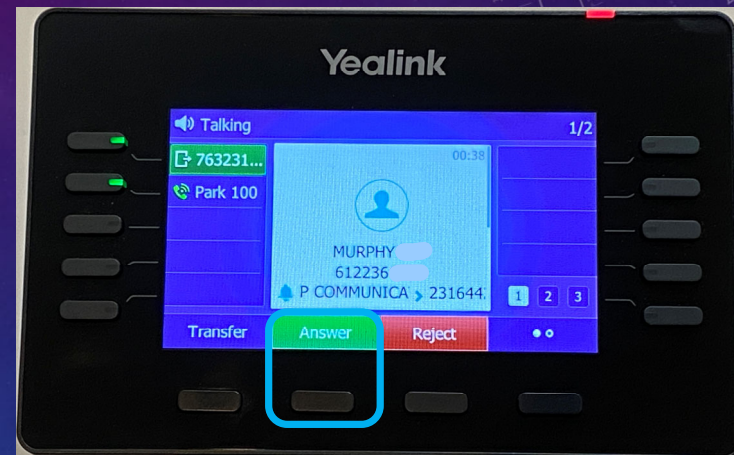



YEALINK DESKPHONE RECEIVING A SECOND INBOUND CALL


 
- Your first caller will automatically be placed on hold

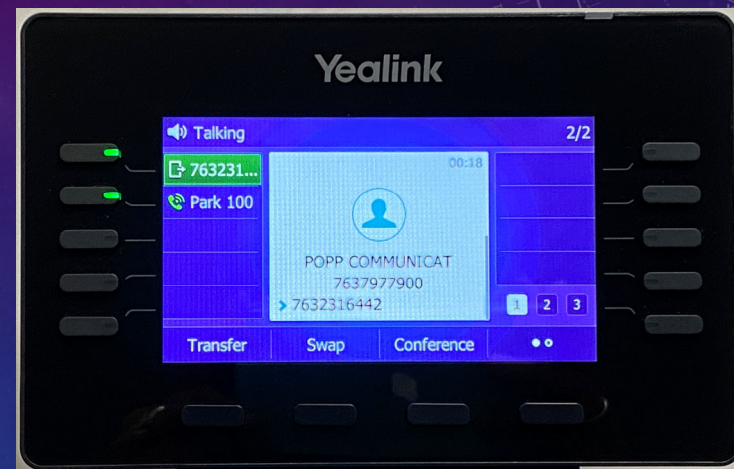



YEALINK DESKPHONE RECEIVING A SECOND INBOUND CALL

  - To return to your first caller:
 - Use Navigation Keypad to select the held call

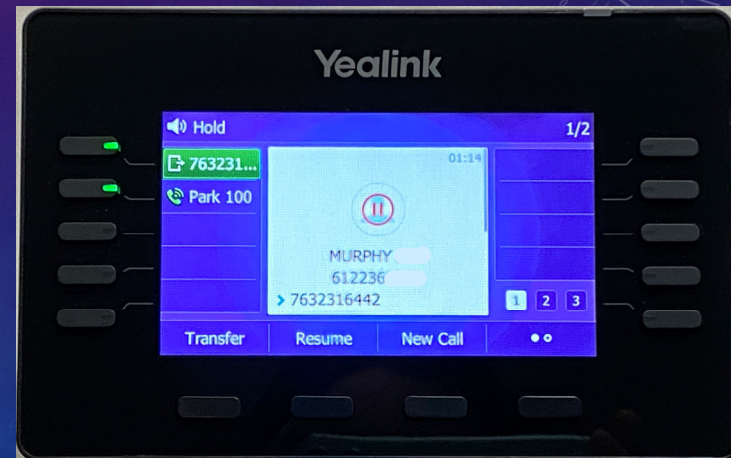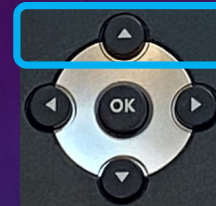



YEALINK DESKPHONE RECEIVING A SECOND INBOUND CALL

- To return to your first caller:
 - Use Navigation Keypad to select the held call
 - Press the Resume softkey
- The second caller is placed on hold
- A headset can also be used





YEALINK DESKPHONE RECEIVING A SECOND INBOUND CALL

For more training videos, visit
www.popp.com/support

