





## YEALINK DESKPHONE WIFI - INTRODUCTION

- Connect to the network wirelessly instead of using a wired Ethernet connection





www.popp.com

# YEALINK DESKPHONE

WIFI SETUP

NOTE: THIS VIDEO FEATURES A T54W. PROCEDURE MAY VARY ON SOME MODELS.

The background of the slide features a dark blue gradient with faint, stylized circular patterns and a large, semi-transparent circular scale with numerical markings from 40 to 260.



## YEALINK DESKPHONE WIFI SETUP

You must complete the following steps before connecting your phone to WiFi:

- Obtain a telephone power supply (available for purchase from POPP)
- Obtain a WF50 USB WiFi Adapter (required for T46U phone model, available for purchase from POPP)
- Contact POPP to enable WiFi on your phone profile







## YEALINK DESKPHONE WIFI SETUP

- If using a T46U phone model, plug the WiFi Adapter into a USB port on the back of the phone.
- Plug in the telephone power supply








## YEALINK DESKPHONE WIFI SETUP

On your deskphone:



- Press the [Menu] softkey
- Use the navigation keypad to select Basic
- Press the [OK] button

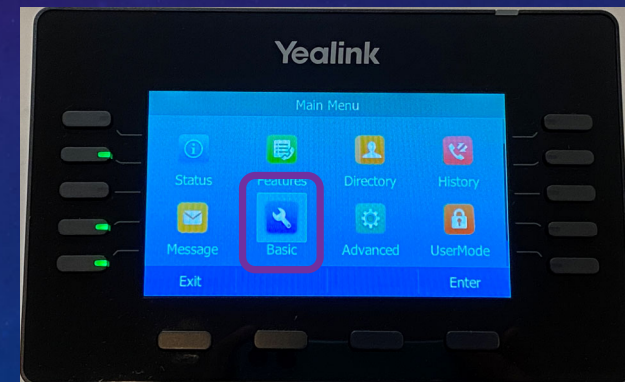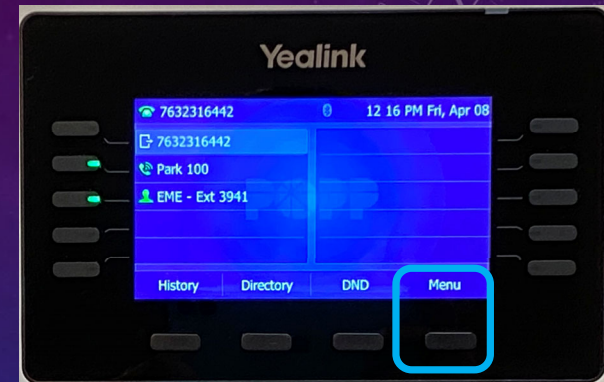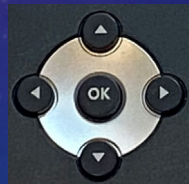



## YEALINK DESKPHONE WiFi SETUP



- Use the navigation keypad to scroll down and select WiFi
- Press the [OK] button

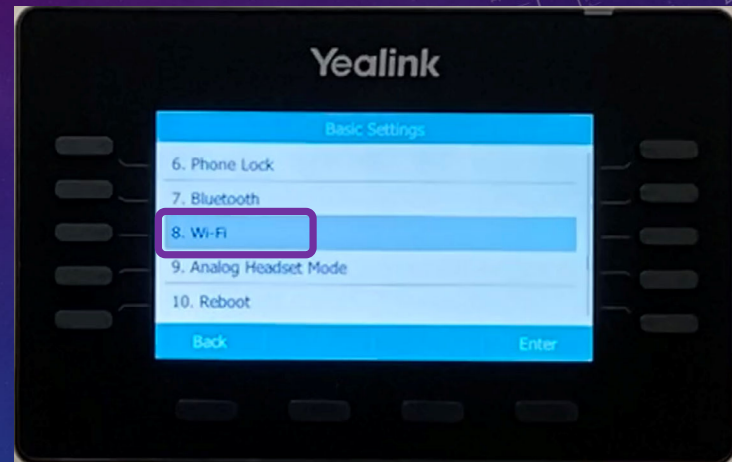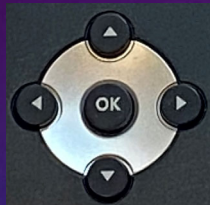



## YEALINK DESKPHONE WIFI SETUP

- Use the [Switch] softkey to turn the WiFi setting On
- Press the [Save] softkey

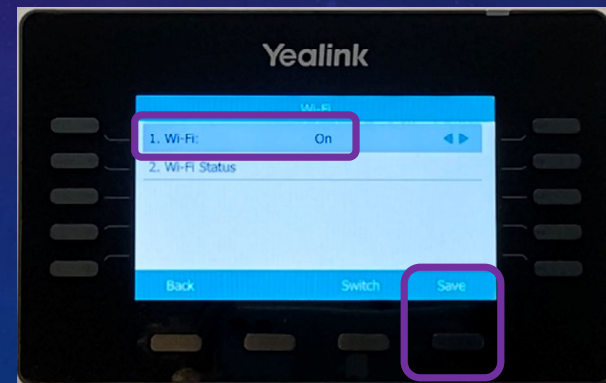
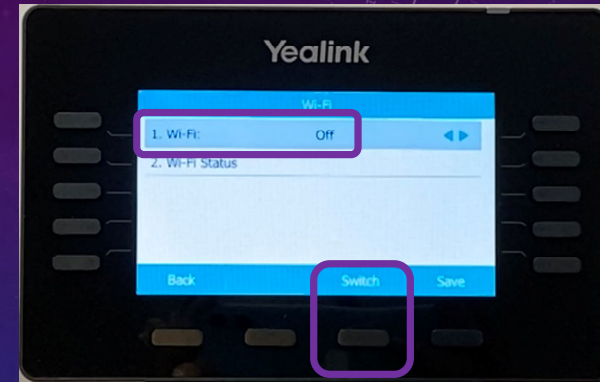






## YEALINK DESKPHONE WIFI SETUP




- Use the navigation keypad to select Easy Connection
- Press the [Connect] softkey

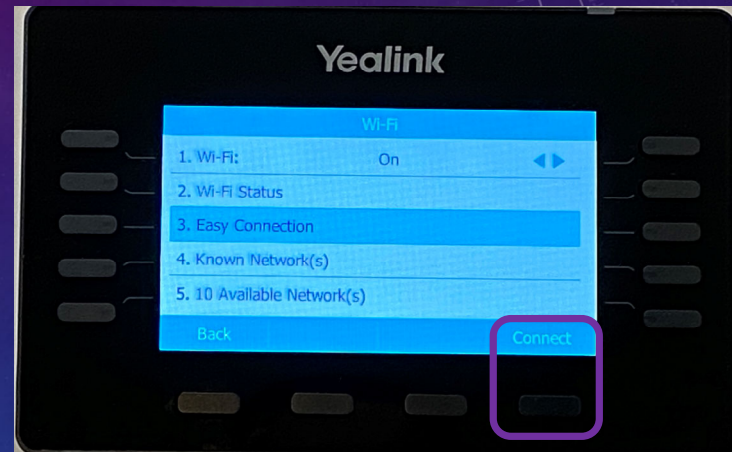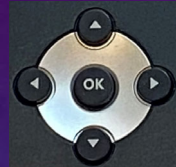



## YEALINK DESKPHONE WIFI SETUP



- Press the [WiFi List] softkey
- Use the navigation keypad to select the desired wireless network
- Press the [Connect] softkey

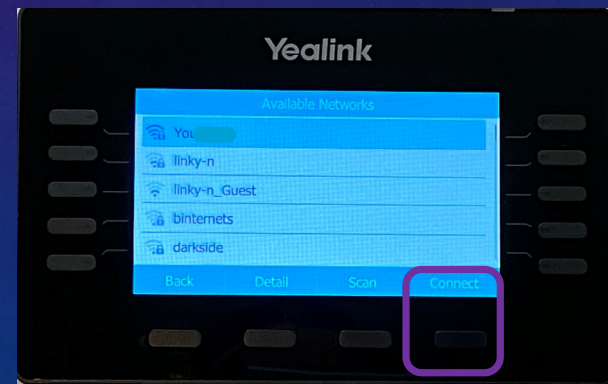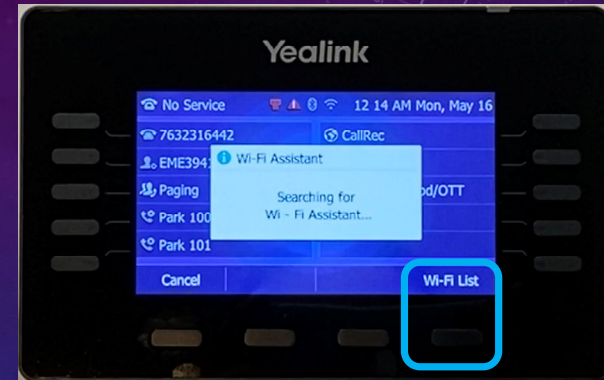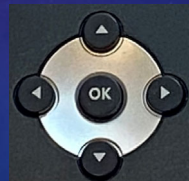



## YEALINK DESKPHONE WIFI SETUP


- Enter the [password] using the dialpad
- Use the [abc...123] softkey to toggle between numbers, letters, and symbols when entering the password
- Press the [Connect] softkey

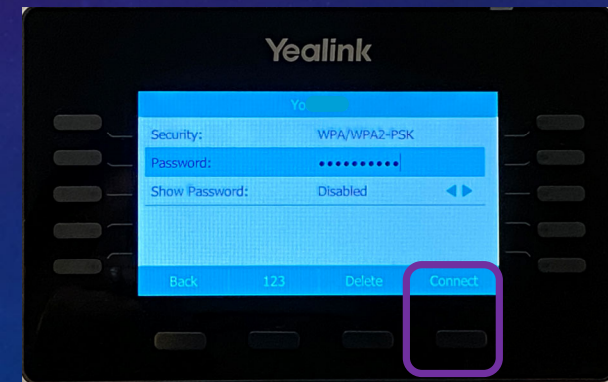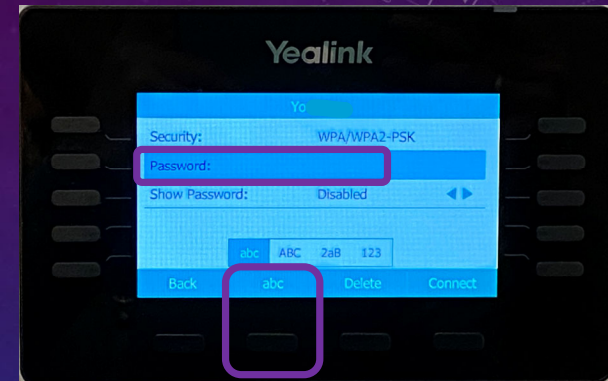



## YEALINK DESKPHONE WIFI SETUP

- Once connected, a check mark will display next to the network

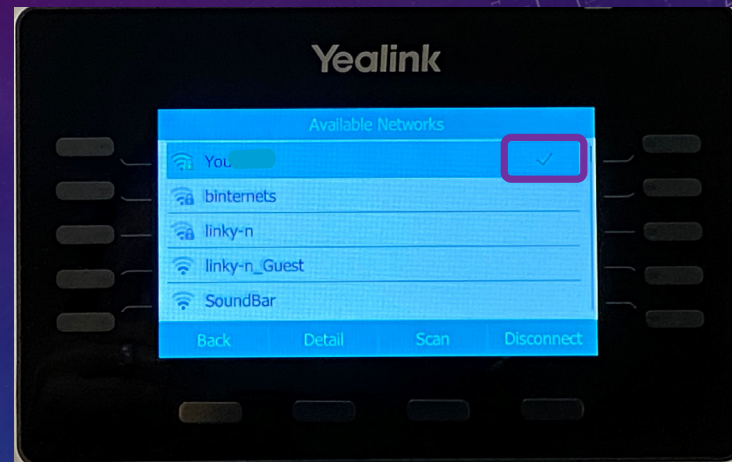





## YEALINK DESKPHONE WIFI SETTINGS

For more training videos, visit  
[www.popp.com/support](http://www.popp.com/support)





www.popp.com

# YEALINK DESKPHONE

TROUBLESHOOTING WIFI

NOTE: THIS VIDEO FEATURES A T54W. PROCEDURE MAY VARY ON SOME MODELS.

The background of the slide features a dark blue gradient with faint, stylized circular patterns and a large, semi-transparent circular scale on the left side, resembling a dial or a speedometer, with numerical markings from 40 to 260.



## YEALINK DESKPHONE TROUBLESHOOTING WIFI

- WiFi is recommended only when running an Ethernet to the phone is not practical
- A strong, reliable WiFi signal is required







## YEALINK DESKPHONE TROUBLESHOOTING WIFI

Troubleshooting options if call quality is not good:

- Move the phone closer to a wireless access point
- Add another wireless access point closer to the phone to improve the signal







## YEALINK DESKPHONE TROUBLESHOOTING WIFI

For more training videos, visit  
[www.popp.com/support](http://www.popp.com/support)





www.popp.com

# YEALINK DESKPHONE

DISABLING WIFI

NOTE: THIS VIDEO FEATURES A T54W. PROCEDURE MAY VARY ON SOME MODELS.




The background of the slide features a dark blue gradient with faint, stylized circular patterns and a large, semi-transparent circular scale with numerical markings from 40 to 260.



## YEALINK DESKPHONE DISABLING WIFI

On your deskphone:



- Press the [Menu] softkey
- Use the navigation keypad to select Basic
- Press the [OK] button

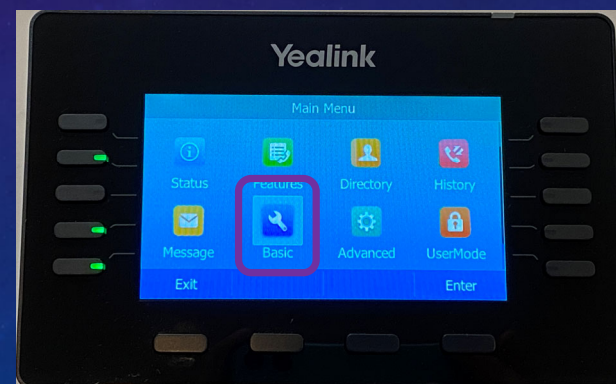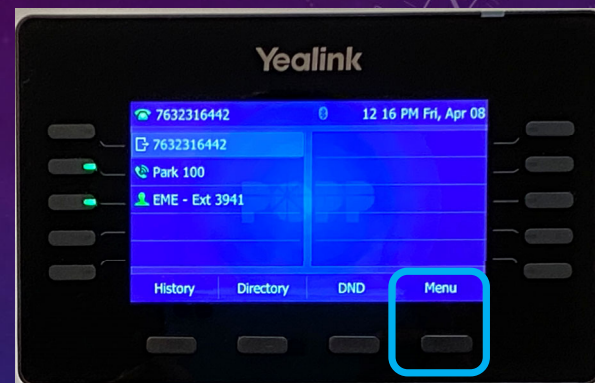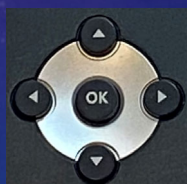



## YEALINK DESKPHONE DISABLING WIFI

- Use the navigation keypad to scroll down and select WiFi
- Press the [OK] button

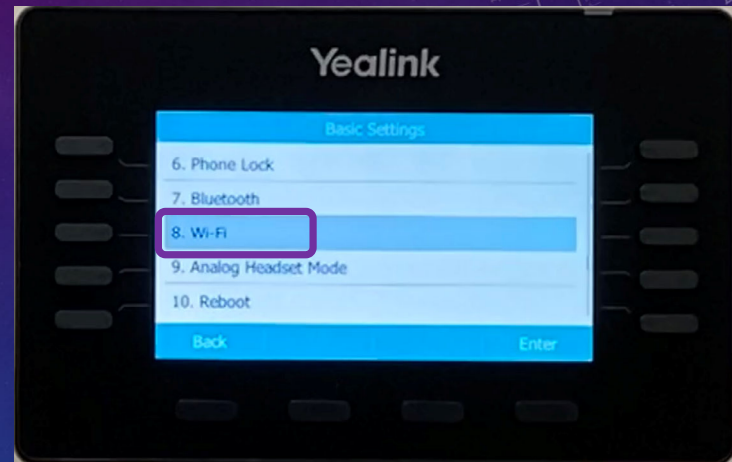
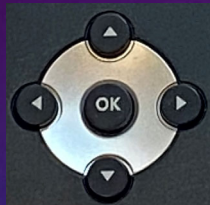






## YEALINK DESKPHONE DISABLING WIFI


- Use the [Switch] softkey to turn the WiFi setting Off
- Press the [Save] softkey

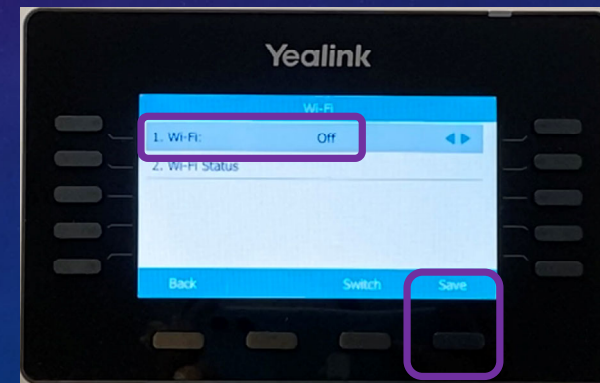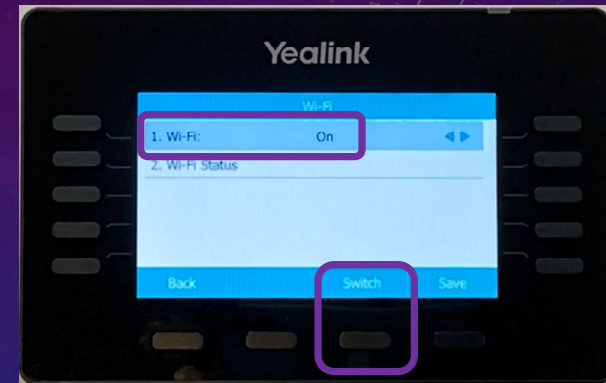



## YEALINK DESKPHONE DISABLING WIFI

- Unplug the WiFi adapter (T46U phone model only)
- Unplug the telephone power supply
- Plug in the Ethernet cable to the Internet port on the back of the phone to re-establish the wired network connection

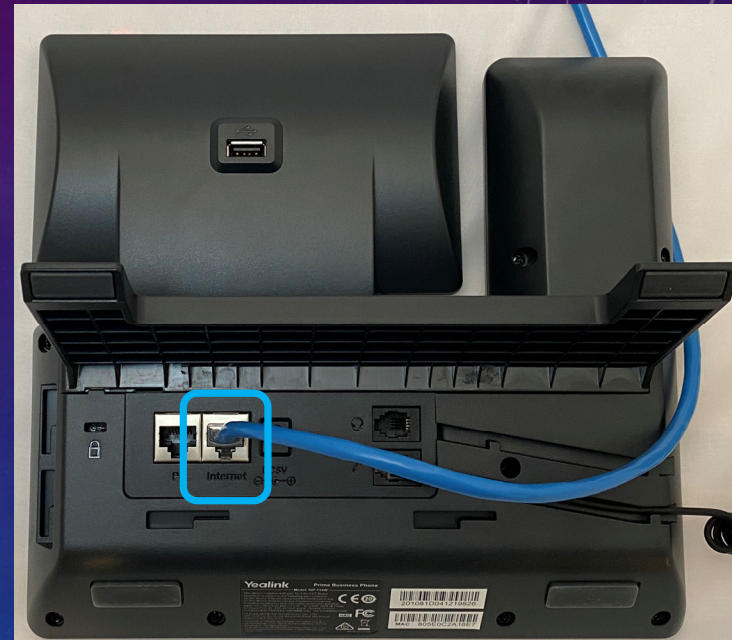



## YEALINK DESKPHONE TROUBLESHOOTING WIFI

For more training videos, visit  
[www.popp.com/support](http://www.popp.com/support)

