

Call Recording – on-demand integrated call recording capabilities are available on the Yealink T46U, T54W, and T57W models which have a USB port. The client can choose to:

- Use an existing USB 2.0 compatible jump drive
- Purchase a 16GB USB jump drive from POPP (stores up to 500 hours of audio as .wav files.)

Enable Call Recording feature in Yealink telephone

- Plug a USB 2.0 compatible jump drive into one of the USB ports located on the back of the telephone. "USB Flash Drive is Connected" will display when a compatible jump drive is properly connected.
- Make sure there is sufficient storage available on the USB jump drive to store calls. A five minute call equals approximately 2.5M of storage. Storage hours remaining (e.g., "USB storage: 99+ hrs. left") will display on the screen.

Record a Phone Call in Progress

Call Recording is available on a per call basis. You must start and stop the recording of each call.

- During a call:
 - o To start recording, press the [..] toggle softkey, then press the [Start REC] softkey
 - To pause recording, press the [...] toggle softkey, then press the [Pause REC] softkey
 - o To resume recording, press [Resume REC] softkey
 - o To stop recording, press the [Stop REC] softkey

Note: Call recording stops automatically when you hang up or when a call is transferred to another phone.

Listen to or Delete Recorded Calls:

Make sure that the USB jump drive is plugged into the USB port on the telephone

- Press the [Menu] softkey, press the [Left] navigation key to select the USB menu option, then press the [OK] button
- With the Browse Audio option selected, press [OK]
- Recorded calls are listed in chronological order with the most recent recording listed at the top
- Use the [Up/Down] navigation keys to select a recording and press the [Play] softkey to play the recording
- While listening to a call:
 - o To adjust playback volume, press [- or +] volume button
 - o Press [Fast Forward] or [Fast Rewind] softkey to jump ahead or back in the recording
 - o To pause playback, press the [Pause] softkey
 - o To resume playback, press the [Play] softkey
- Press the [Back] softkey to return to the list of recorded calls
- To delete a call:
 - o Use the [Up/Down] navigation keys to select the recording, then press the [Delete] softkey
 - o Press the [OK] softkey to confirm deletion or the [Cancel] softkey to cancel
- Press the [Back] softkey to exit when finished

Note: You can also listen to and delete recorded calls by connecting the USB jump drive to your computer.

For Additional Training and Support

Visit www.popp.com or call POPP Communications at 763-797-7900