

1. Logging In

- Go to: <http://portal.popp.com>
- Number: enter user's 10-digit phone number (or e-mail if e-mail login is enabled)
- Password:
 - First time login - click [Reset Password] and follow the instructions sent via e-mail to establish your password. You will be prompted to enter an Account Email (password reset e-mail address) if you do not have one set. You may also opt to login using your e-mail address instead of your phone number.




Password Requirements:

- 8-20 characters and must include 1 number, 1 letter, and one special character
 - Cannot contain the same character more than 2x in a row
 - Cannot contain more than 2 characters in a sequence (e.g, 1234, or abcd)
 - Cannot contain 4 or more digits of the phone number (e.g., if phone number ends in 7900, the password cannot contain "7900" anywhere in the password)
- Enter the password and click [Login]

2. Yealink Telephone Configuration

1. Under Personal Details, click [Devices]
2. Click [set keys]

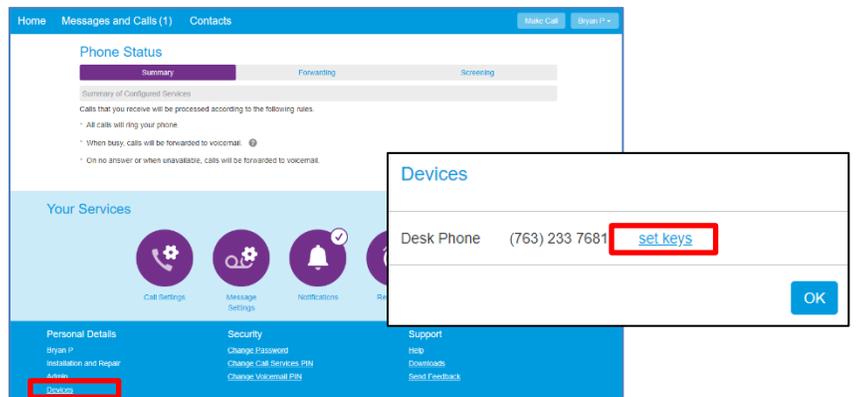

3. Click [Edit]



4. Click [Programmable Keys – Line] (or click on the line keys on the telephone) to configure a line key button:
- A list of keys (“Key 1”, “Key 2”, etc.) will appear below. The key numbers listed correspond to the line key buttons on the telephone as follows:



Yealink T31P:

telephone display	Key 1
	Key 2

Yealink T33G:

With 1-4 keys programmed:

telephone display	Key 1
	Key 2
	Key 3
	Key 4

With up to 12 keys programmed:

Page 1:	<table border="1" style="width: 100%;"> <tr><td rowspan="4" style="text-align: center;">telephone display</td><td style="text-align: center;">Key 1</td></tr> <tr><td style="text-align: center;">Key 2</td></tr> <tr><td style="text-align: center;">Key 3</td></tr> <tr><td style="text-align: center;">toggle key</td></tr> </table>	telephone display	Key 1	Key 2	Key 3	toggle key	Page 2:	<table border="1" style="width: 100%;"> <tr><td rowspan="4" style="text-align: center;">telephone display</td><td style="text-align: center;">Key 4</td></tr> <tr><td style="text-align: center;">Key 5</td></tr> <tr><td style="text-align: center;">Key 6</td></tr> <tr><td style="text-align: center;">toggle key</td></tr> </table>	telephone display	Key 4	Key 5	Key 6	toggle key	Page 3:	<table border="1" style="width: 100%;"> <tr><td rowspan="4" style="text-align: center;">telephone display</td><td style="text-align: center;">Key 7</td></tr> <tr><td style="text-align: center;">Key 8</td></tr> <tr><td style="text-align: center;">Key 9</td></tr> <tr><td style="text-align: center;">toggle key</td></tr> </table>	telephone display	Key 7	Key 8	Key 9	toggle key	Page 4:	<table border="1" style="width: 100%;"> <tr><td rowspan="4" style="text-align: center;">telephone display</td><td style="text-align: center;">Key 10</td></tr> <tr><td style="text-align: center;">Key 11</td></tr> <tr><td style="text-align: center;">Key 12</td></tr> <tr><td style="text-align: center;">toggle key</td></tr> </table>	telephone display	Key 10	Key 11	Key 12	toggle key
telephone display	Key 1																										
	Key 2																										
	Key 3																										
	toggle key																										
telephone display	Key 4																										
	Key 5																										
	Key 6																										
	toggle key																										
telephone display	Key 7																										
	Key 8																										
	Key 9																										
	toggle key																										
telephone display	Key 10																										
	Key 11																										
	Key 12																										
	toggle key																										

Yealink T46U and T54W:

With 1-10 keys programmed:

Key 1	telephone display	Key 6
Key 2		Key 7
Key 3		Key 8
Key 4		Key 9
Key 5		Key 10

With up to 27 keys programmed:

Page 1:	<table border="1" style="width: 100%;"> <tr><td rowspan="5" style="text-align: center;">telephone display</td><td style="text-align: center;">Key 1</td><td style="text-align: center;">Key 6</td></tr> <tr><td style="text-align: center;">Key 2</td><td style="text-align: center;">Key 7</td></tr> <tr><td style="text-align: center;">Key 3</td><td style="text-align: center;">Key 8</td></tr> <tr><td style="text-align: center;">Key 4</td><td style="text-align: center;">Key 9</td></tr> <tr><td style="text-align: center;">Key 5</td><td style="text-align: center;">toggle key</td></tr> </table>	telephone display	Key 1	Key 6	Key 2	Key 7	Key 3	Key 8	Key 4	Key 9	Key 5	toggle key	Page 2:	<table border="1" style="width: 100%;"> <tr><td rowspan="5" style="text-align: center;">telephone display</td><td style="text-align: center;">Key 10</td><td style="text-align: center;">Key 15</td></tr> <tr><td style="text-align: center;">Key 11</td><td style="text-align: center;">Key 16</td></tr> <tr><td style="text-align: center;">Key 12</td><td style="text-align: center;">Key 17</td></tr> <tr><td style="text-align: center;">Key 13</td><td style="text-align: center;">Key 18</td></tr> <tr><td style="text-align: center;">Key 14</td><td style="text-align: center;">toggle key</td></tr> </table>	telephone display	Key 10	Key 15	Key 11	Key 16	Key 12	Key 17	Key 13	Key 18	Key 14	toggle key	Page 3:	<table border="1" style="width: 100%;"> <tr><td rowspan="5" style="text-align: center;">telephone display</td><td style="text-align: center;">Key 19</td><td style="text-align: center;">Key 24</td></tr> <tr><td style="text-align: center;">Key 20</td><td style="text-align: center;">Key 25</td></tr> <tr><td style="text-align: center;">Key 21</td><td style="text-align: center;">Key 26</td></tr> <tr><td style="text-align: center;">Key 22</td><td style="text-align: center;">Key 27</td></tr> <tr><td style="text-align: center;">Key 23</td><td style="text-align: center;">toggle key</td></tr> </table>	telephone display	Key 19	Key 24	Key 20	Key 25	Key 21	Key 26	Key 22	Key 27	Key 23	toggle key
telephone display	Key 1		Key 6																																			
	Key 2		Key 7																																			
	Key 3		Key 8																																			
	Key 4		Key 9																																			
	Key 5	toggle key																																				
telephone display	Key 10	Key 15																																				
	Key 11	Key 16																																				
	Key 12	Key 17																																				
	Key 13	Key 18																																				
	Key 14	toggle key																																				
telephone display	Key 19	Key 24																																				
	Key 20	Key 25																																				
	Key 21	Key 26																																				
	Key 22	Key 27																																				
	Key 23	toggle key																																				

Yealink T57W:

With 1-11 keys programmed:

Key 1	Key 7
Key 2	Key 8
Key 3	Key 9
Key 4	Key 10
Key 5	Key 11
Key 6	toggle key

With up to 29 keys programmed:

Key 1	Key 12	Key 18	Key 24	Key 7
Key 2	Key 13	Key 19	Key 25	Key 8
Key 3	Key 14	Key 20	Key 26	Key 9
Key 4	Key 15	Key 21	Key 27	Key 10
Key 5	Key 16	Key 22	Key 28	Key 11
Key 6	Key 17	Key 23	Key 29	toggle key

- Click [Programmable Keys – Bottom] (or click on the softkeys on the telephone) to configure a softkey button:
 - A list of keys (“Key 1”, “Key 2”, etc.) will appear below. The key numbers listed correspond to the softkey buttons on the telephone as follows:

telephone display				
Key1	Key 2	Key 3	Key 4	More*

*[More] softkey displays in the Key 4 position when five or more softkeys are programmed

- Click on the [Key #] to be configured and complete the following fields:

- Soft key action: select the desired function
- Enter/select the following (if applicable):
 - Number: enter 10-digit phone number
 - Park orbit: select park orbit
 - Extension: enter 4-digit extension
 - Line: select line
- Label: enter a label to appear on the phone display

▼Key 4	grp pickup
*Soft key action	Group Pickup
*Label	grp pickup

- Click [Save changes] to save or [Discard changes] + [Discard] to cancel
- Reboot your telephone: On your telephone, press the [Menu] softkey, navigate to [Basic], scroll down and select [Reboot], then press [Enter] softkey. Wait up to five minutes for the telephone to learn its new configuration.
- Click [close] when finished

For Additional Training and Support

- Visit www.popp.com or call POPP Communications at 763-797-7900