

Bluetooth

Bluetooth capabilities are supported on the following Yealink models:

- T46U (additional Yealink BT41 Bluetooth 4.1 dongle must be purchased)
- T54W and T57W (includes integrated Bluetooth 4.2)

To enable Bluetooth on a T46U or T54W:

- Insert the Bluetooth dongle into a USB port on the back of the phone (for T46U only)
- Press the **[Menu]** softkey and navigate to select the **Basic** menu option, then press the **[OK]** button
- Scroll down the list and select **Bluetooth**, then press the **[OK]** button
- Press the **[Switch]** softkey to turn **Bluetooth On**, then press the **[Save]** softkey
- Turn on your Bluetooth headset and put it into pairing mode. Refer to your Bluetooth headset manual for instructions for how to enter pairing mode.
- Press the **[Scan]** softkey to scan for your Bluetooth headset
- Your Bluetooth headset will appear on the screen once detected. Press the **[Connect]** softkey.
- Your Bluetooth headset is now paired to the phone. A Bluetooth symbol will display at the top of the home screen.

To enable Bluetooth on a T57W:

- Touch the **[Menu]** softkey, then touch the **[Basic]** menu option
- Touch **[Bluetooth]**, then touch **[On]** to turn Bluetooth on
- Turn on your Bluetooth headset and put it into pairing mode. Refer to your Bluetooth headset manual for instructions for how to enter pairing mode.
- Touch the **[Scan]** softkey to scan for your Bluetooth headset
- Your Bluetooth headset will appear on the screen once detected. Touch to select your device in the list to connect.
- Your Bluetooth headset is now paired to the phone. A Bluetooth symbol will display at the top of the home screen.

Using Bluetooth Headset (process may vary depending on headset manufacturer):

- Answering Calls (calls will alert the Bluetooth headset and ring the phone):
 - Press headset button  on the phone or press the button on Bluetooth headset to answer a call
 - To move a call from the phone to a Bluetooth headset, press the headset button  on the phone or press the button on Bluetooth headset
- Ending Calls:
 - Press **[End Call]** softkey to end the call on the phone or press the button on Bluetooth headset to end call from the headset
- Paging (Paging key must be programmed by POPP):
 - Press **[Paging]** key + **[Page Group]** and press the **[Paging]** softkey to page using a Bluetooth headset
 - Note:** Pages using a Bluetooth headset may not sound as loud or clear as pages from the phone.
- Volume Adjustments:
 - In call volume is adjusted by pressing the  buttons on the phone or using the volume buttons on the Bluetooth headset. Volume changes will automatically save after adjusting.
 - Bluetooth headset alert volume is adjusted using Bluetooth headset volume buttons (while a call is alerting only).

- Muting calls:
 - Press the mute button  on the phone to mute the Bluetooth headset
- Additional Bluetooth headset features may be available, depending on the headset manufacturer and model. See your Bluetooth headset user guide for options available (e.g., redial, reject call, etc.)

For Additional Training and Support

- Visit www.popp.com or call POPP Communications at 763-797-7900