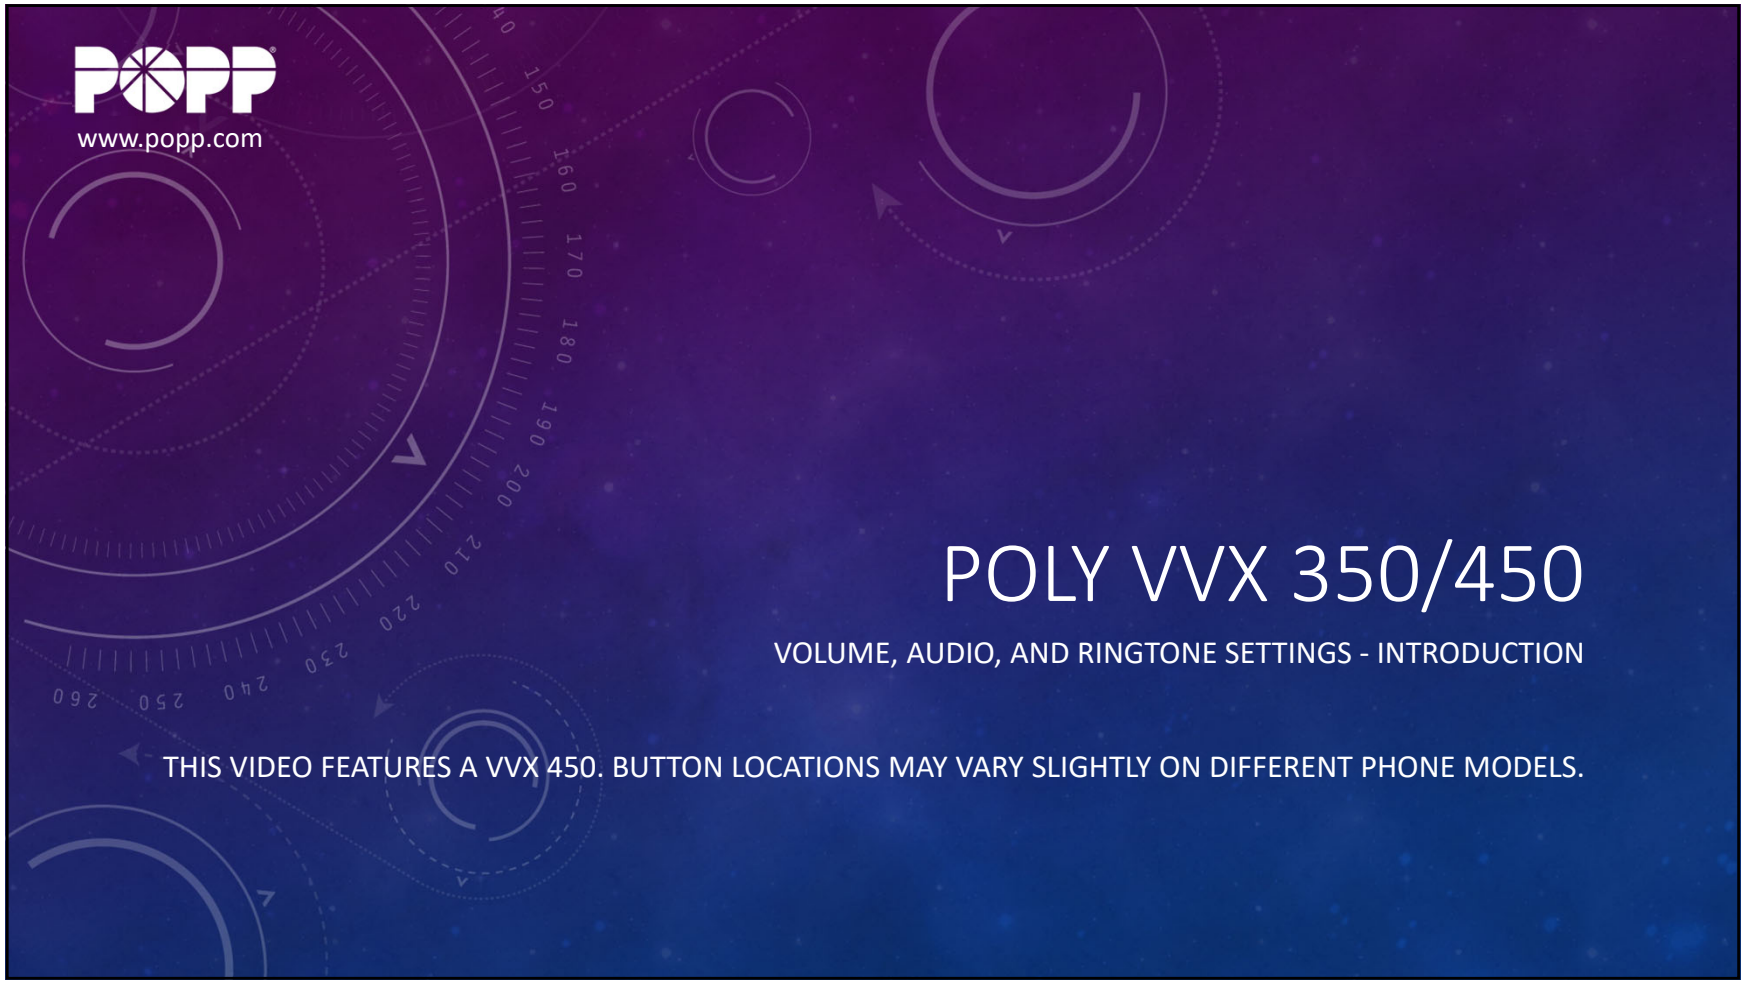

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
VOLUME, AUDIO, AND RINGTONE SETTINGS - INTRODUCTION

POPP.com, Inc. All rights reserved

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450 HANDSET VOLUME

- To adjust the handset volume:
  - Lift the handset
  - Press or hold the plus (+) or minus (-) on the Volume button
  - This change will only affect the inbound volume of the call

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
HANDSET VOLUME

For more training videos, visit
www.popp.com/support

POPP.com, Inc. All rights reserved

POPP.com, Inc. All rights reserved

VVX 350/450 SPEAKER VOLUME

- To adjust the speaker volume:
  - Press the Speaker button

POPP.com, Inc. All rights reserved

VVX 350/450
SPEAKER VOLUME

- To adjust the speaker volume:
  - Press the Speaker button
  - Press or hold the plus (+) or minus (-) on the volume button
- This adjustment can also be made during a phone call while using the speakerphone

POPP.com, Inc. All rights reserved

VVX 350/450
SPEAKER VOLUME

For more training videos, visit
www.popp.com/support

POPP.com, Inc. All rights reserved

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450 HEADSET VOLUME

- To adjust the headset volume:
  - Press the Headset button

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
HEADSET VOLUME

- To adjust the headset volume:
  - Press the Headset button
  - Press or hold the plus (+) or minus (-) on the volume button
- This adjustment can also be made during a phone call while using a headset

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
HEADSET VOLUME

For more training videos, visit
www.popp.com/support

POPP.com, Inc. All rights reserved

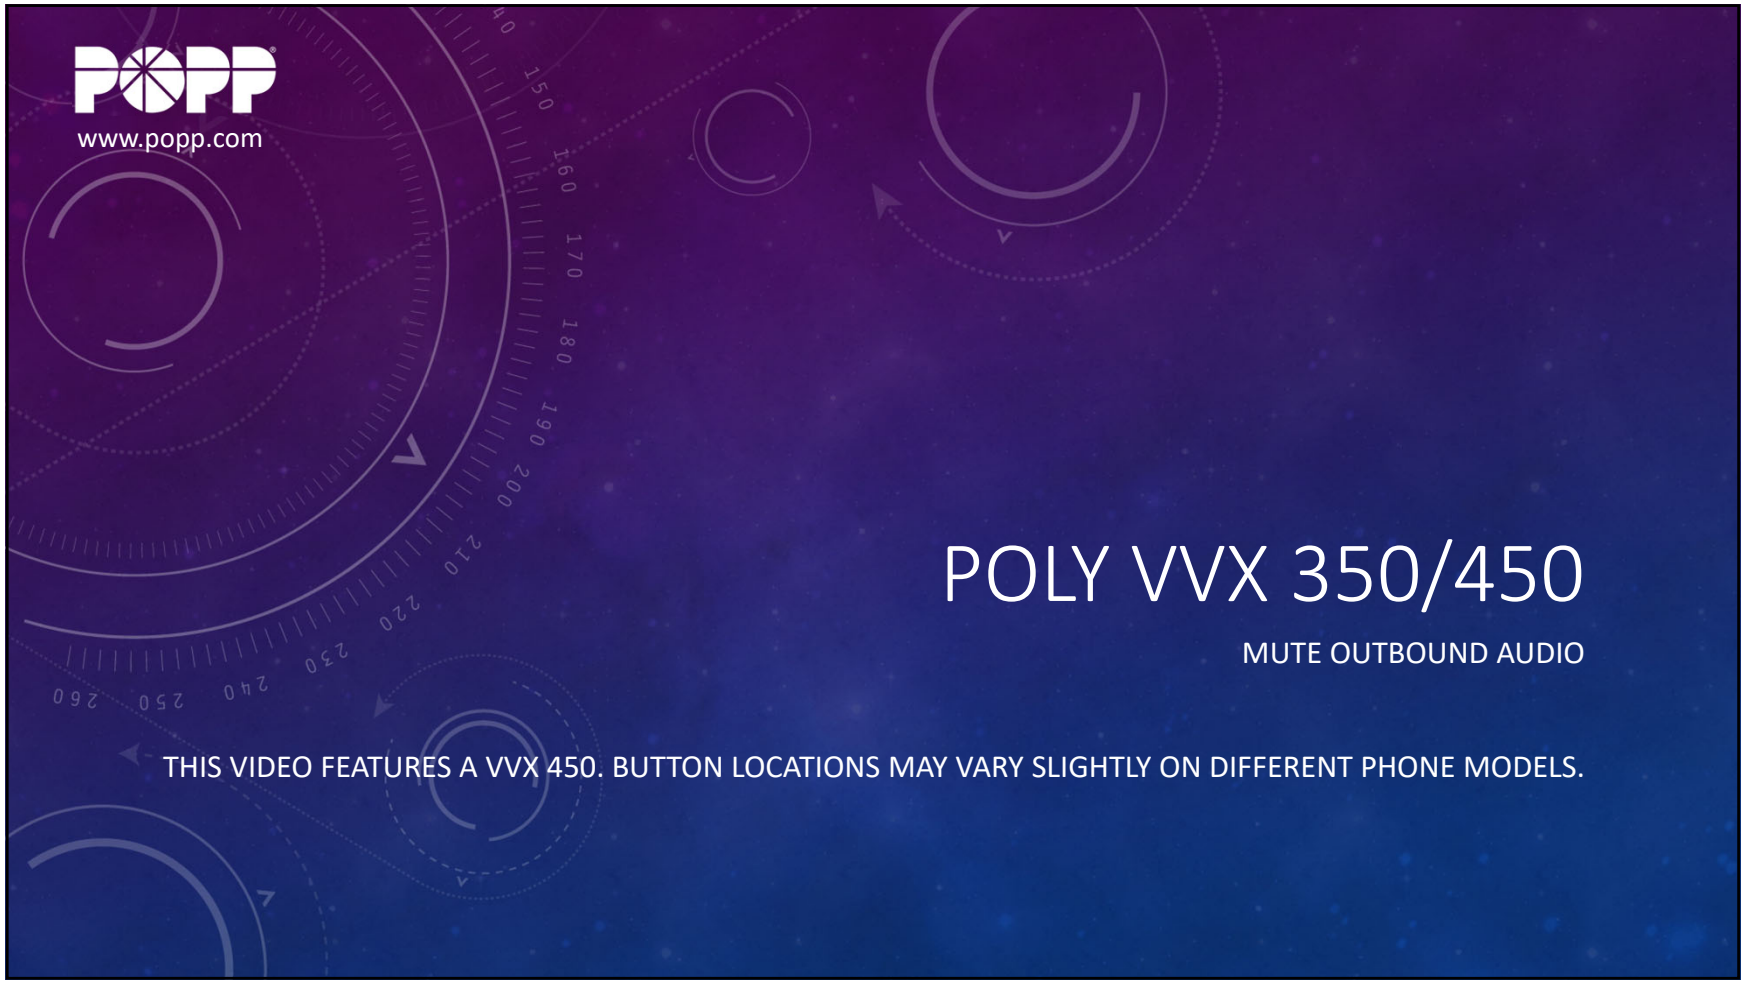

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
MUTE OUTBOUND AUDIO

- To mute outbound audio:
  - Press the Mute button

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
MUTE OUTBOUND AUDIO

- To unmute:
  - Press the Mute button again

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
MUTE OUTBOUND AUDIO

For more training videos, visit
www.popp.com/support

POPP.com, Inc. All rights reserved

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
RING VOLUME

- To adjust the ring volume (with the phone idle):
  - Press or hold the plus (+) or minus (-) on the Volume button
  - The sample ring tone will indicate the new ring volume

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
RING VOLUME

For more training videos, visit
www.popp.com/support

POPP.com, Inc. All rights reserved

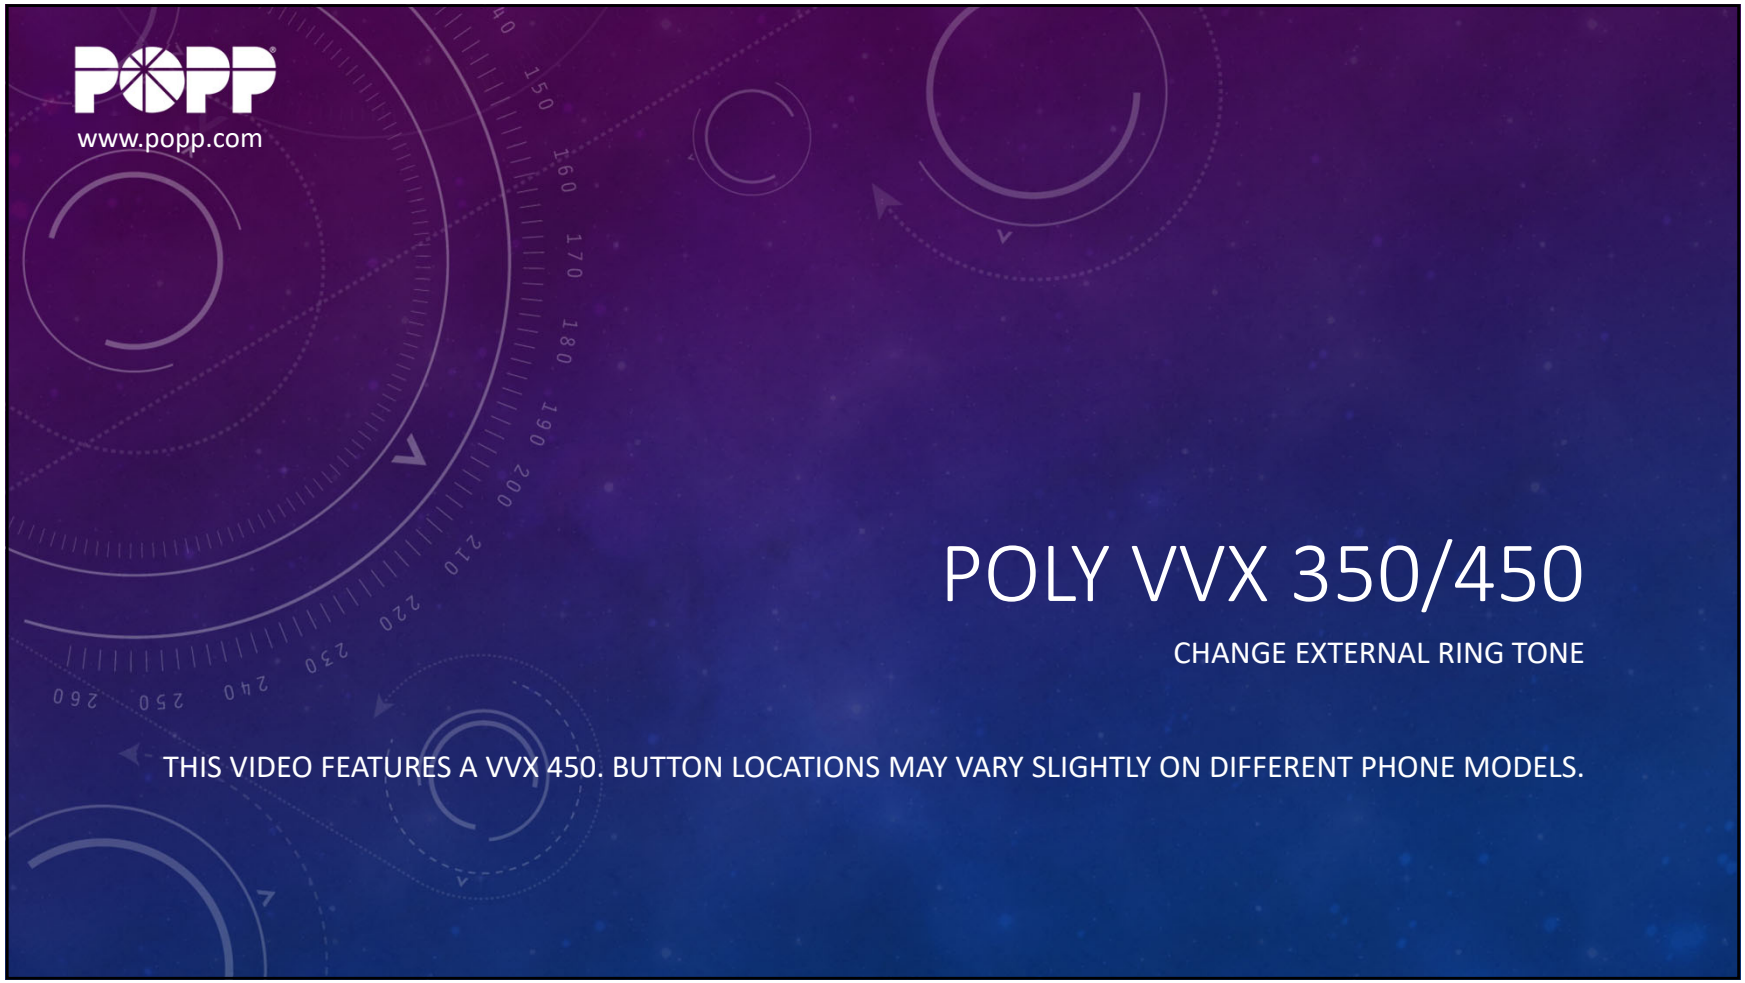

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
CHANGE EXTERNAL RINGTONE

- Press the Home button

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
CHANGE EXTERNAL RINGTONE

- Use the navigation keypad to select:
  - Settings
  - Basic
  - Ring Type
  - Default

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
CHANGE EXTERNAL RINGTONE

- The Play softkey can be used to sample each ring tone

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
CHANGE EXTERNAL RINGTONE

- Use the Select softkey to select the desired ringtone

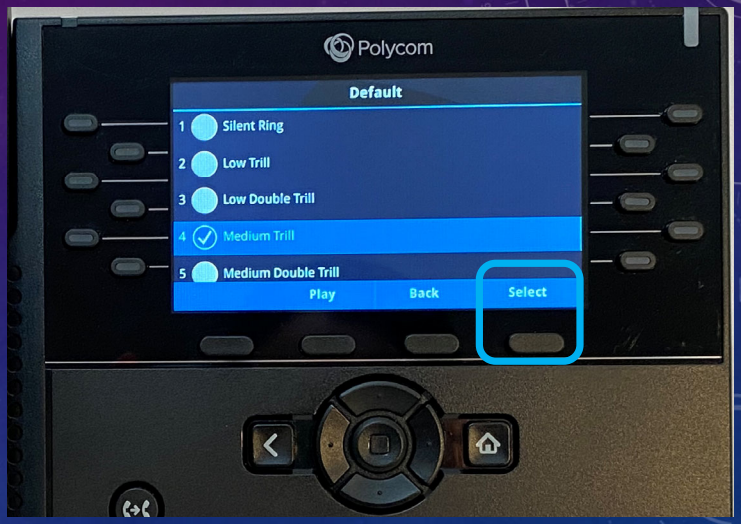

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
CHANGE EXTERNAL RINGTONE

- Lift the handset and hang up to exit the menu

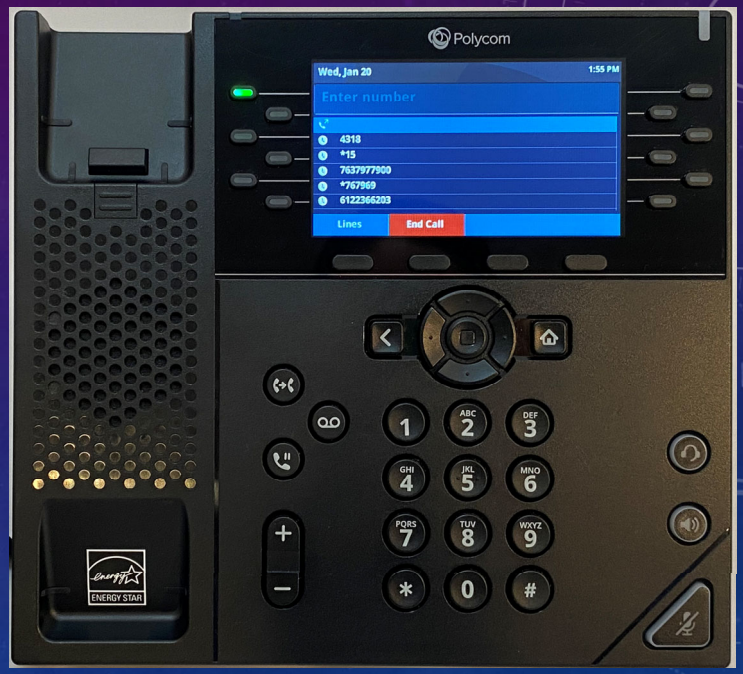

POPP.com, Inc. All rights reserved

www.popp.com

VVX 350/450
CHANGE EXTERNAL RINGTONE

For more training videos, visit
www.popp.com/support

POPP.com, Inc. All rights reserved